



1



2



3



4

INSTRUCTIONS

Step 1: Using a die grinder or similar, cut through the weld on your PAP pistol muzzle cap taking care not to cut into the front sight unit.

Step 2: Turn the muzzle cap clockwise to remove it from the threaded end of the barrel.

Step 3: Install detent pin and spring and hold in place using a punch as shown. Install small spring pin to retain detent.

Step 4: Using a punch, hold the detent back as shown and thread muzzle device onto threaded end of barrel counter clockwise until it bottoms out on the front sight and back off until the detent locks.