

**CZ-USA SHOTGUN
INSTRUCTION MANUAL**



CZ-USA

www.cz-usa.com



CZ-USA
P.O. Box 171073
Kansas City, KS 66117-0073
Phone# 1-800-955-4486
Fax# 913-321-4901

www.cz-usa.com

SAFETY INSTRUCTIONS

Before handling the firearm read this manual carefully and observe the following safety instructions.

Improper and careless handling of the firearm could result in unintentional discharge and could cause injury, death or damage to property. The same consequences can be caused by any unauthorized modifications or adjustments, corrosion, or use of non-standard or damaged ammunition. In these cases the manufacturer shall not be responsible in any manner whatsoever for the resultant consequences.

Before leaving the factory this firearm was tested, carefully inspected, and packed. CZ cannot accept responsibility for product handling while in transit, or upon leaving the factory. Please consider that the wooden parts of the shotgun are not under warranty. Therefore, please examine this firearm carefully at the time of purchase to ensure that it is unloaded and undamaged.

This instruction manual should always accompany the firearm, even in the case of its loan or sale.

Always follow the safety instructions for your safety and the safety of others.

- 1 Always handle your firearm as if it were loaded.
- 2.Never point your firearm at anything you do not intend to shoot.
- 3.Never take anyone's word that a gun is unloaded.
- 4.Always make sure that your firearm is not loaded before laying it down, or handing it to another person.
- 5.Always store your firearm unloaded with the firing mechanism released.
- 6.Never abuse your firearm by using it for any purpose other than shooting.
- 7.Never leave a loaded firearm unattended.
- 8.Prior to loading the firearm make sure that barrel bore, chamber, and action are clean and clear of obstructions. Clean a dirty firearm immediately so that it will function properly and safely.
- 9.Always use only clean, dry, original high quality commercially manufactured ammunition, which is appropriate to the gauge of your firearm.
- 10.Never drink alcoholic beverages or take drugs before or during shooting.
- 11.Always wear safety glasses and ear protection during shooting whenever possible.
- 12.Always keep the safety on when the shotgun is loaded with a cartridge in the chamber, until you are ready to fire. Keep firearm pointed in a safe direction when disengaging the safety.
- 13.Always keep clear and keep others clear of the ejection port.
- 14.Never squeeze the trigger or put your finger in the trigger guard until you are aiming at a target and ready to shoot.
- 15.Always be absolutely sure of your target, and the area behind it, before you squeeze the trigger.
- 16.Never shoot at a hard surface such as rock, or a liquid surface such as water.
- 17.Never fire your firearm near an animal unless it is trained to accept the noise.
- 18.Never indulge in "horseplay" while holding your firearm.
- 19.Failure to fire: always hold the firearm, keeping it pointed towards the target, or a safe open area and wait 30 seconds when the firearm fails to fire. If a hangfire (slow ignition) has occurred, the round will fire within 30 seconds. If the round does not fire, remove the magazine, eject the round and examine the primer; if the firing pin indent on the primer is light, or non-existent, have the firearm examined by a competent gunsmith.
- 20.Always make sure your firearm is not loaded before cleaning, storing or traveling.
- 21 Always keep and store your firearm and ammunition in separate locked receptacles out of reach and sight of children and untrained people.
- 22.Never alter any parts of your shotgun as the safety and proper function of your shotgun could be seriously compromised.
- 23.Always be aware that corrosion, use of damaged ammunition, dropping the rifle on hard surfaces or other "coarse treatment" could cause a damage you may not see. If something like this happens allow the firearm to be examined and tested by a competent gunsmith.

Over & Under Shotguns


ASSEMBLY



1- Pull the latch on the forearm that is mounted on the barrel.



2- Detach the forearm from the barrel.

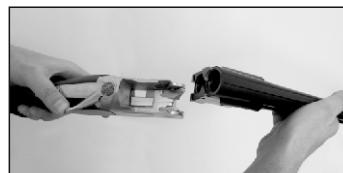

3- Push the top lever fully to the right



4- While keeping the top lever pushed to right install the barrel to the receiver with an approx 40-degree angle as it is seen in the figure. Be sure the barrel is completely installed to the receiver otherwise shotgun will not close.



5- Be sure that ejectors are properly installed in the receiver.



6- By forcing the barrel upwards close the shotgun, be sure the barrel and receiver are properly aligned and top lever returns to slightly to the right of center. It is normal that the top lever does not return exactly to the center, this allows for wear.



7- Mount the forearm to the barrel as seen in the figure. Be sure the opening latch of forearm is completely closed.



8- Put the safety on by moving the safety switch to the rear position.

Note: Disassemble your shotgun by reversing the assembly instruction.



www.cz-usa.com

1



www.cz-usa.com



Over & Under Shotguns

USAGE




1- Open your shotgun by pushing the top lever to the right while pushing the barrel downward.




2- MAKE SURE THE SAFETY IS ON.
(Moved to rear "S" exposed) Install the suitable cartridges according to your shotgun's gauge and chamber length.



3- Close your shotgun. WARNING: YOUR SHOTGUN IS NOW LOADED. Move the safety to the forward position and pull the trigger to fire.

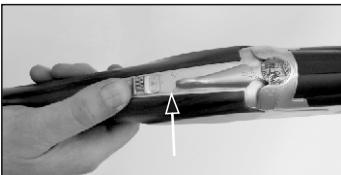

4- Barrel Selection (Single trigger models only)
With safety on, move the selector located inside the safety to the right to fire the bottom barrel first. After firing the bottom barrel the top barrel will fire with another pull of the trigger.

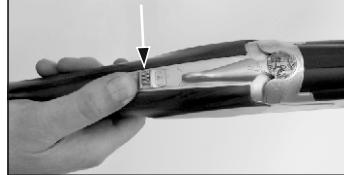

5- Barrel Selection (Single trigger models only)
With safety on, move the selector located inside the safety to the left to fire the top barrel first. After firing the top barrel the bottom barrel will fire with another pull of the trigger.



6- After shooting, open the shotgun by pushing the top lever fully to the right. Fired cartridges will be lifted for easy removal or ejected if your gun is fitted with automatic ejectors.



CHOKE TUBES

The choke constriction is designated by a series of notches at the muzzle end of the choke tube.
WARNING: Never check the choke designation, install choke tubes or remove choke tubes unless the gun is unloaded and the action is open

www.cz-usa.com

3

Over & Under Shotguns

Choke Tubes : Best Usage



Full - Turkey


Imp mod - Waterfowling

Mod - Waterfowling, Upland Hunting

Imp Cyl - Upland Hunting

Cyl - Upland Hunting

MAINTENANCE

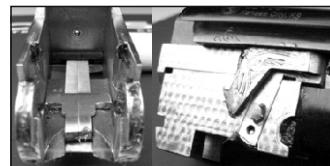

Apply grease as shown

- Clean the barrel bore by passing a swab or cleaning patch through it to remove residue. If necessary, use a cleaning rod with a bore brush soaked in bore cleaning solvent.
- Run a clean dry cloth through the bore to remove excess residue
- Lightly oil the inside of the barrel with a clean patch coated with oil
- Clean all exposed parts with a soft cloth and lightly oil
- Apply a light coat of lubricant (preferably grease) to the connecting points of the receiver, barrels and forearm.
- Do not apply excess oil, grease or solvent. Excess cleaning fluids attract dirt, which can interfere with the function of the gun.
- Clean and lightly oil the external surface of the gun to remove any trace of dirt, moisture and fingerprints.

If you need further detailed maintenance contact a professional gunsmith.



www.cz-usa.com

4

www.cz-usa.com



Side by Side Shotguns

ASSEMBLY




1- Pull the latch on the forearm that is mounted on the barrel.




2- Detach the forearm from the barrel.




3- Push the top lever fully to the right

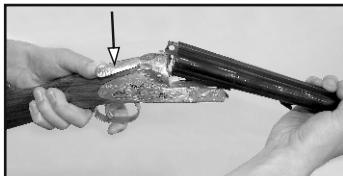

4- While keeping the top lever pushed to right install the barrel to the receiver with an approx 40- degree angle as it is seen in the figure. Be sure the barrel is completely installed to the receiver otherwise shotgun will not close.

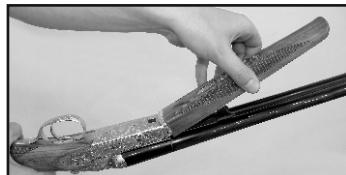

5- Mount the forearm to the barrel as seen in the figure. Make sure that the opening latch is completely closed.

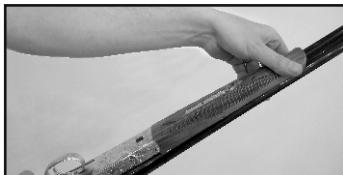

6- Put the safety on by moving the safety switch to the rear.

Note: Disassemble by reversing the assembly instruction.



www.cz-usa.com

5

Side by Side Shotguns


USAGE




1- Open your shotgun by pushing the top lever to the right while pushing the barrel downward.



2- MAKE SURE THE SAFETY IS ON.
(Moved to rear "S" exposed). Install the suitable cartridges according to your shotgun's gauge and chamber length. Close your shotgun. **WARNING: YOUR SHOTGUN IS NOW LOADED.** Move the safety to the forward position and pull the trigger to fire.

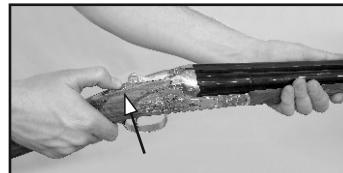


3- Barrel Selection (Single trigger models only)
With safety on, move the selector located inside the safety to the left to fire the left barrel first. After firing the left barrel the right barrel will fire with another pull of the trigger.

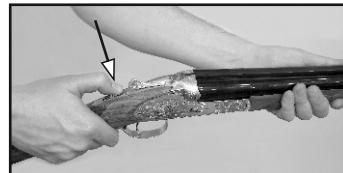

4- Barrel Selection (Single trigger models only)
With safety on, move the selector located inside the safety to the right to fire the right barrel first. After firing the right barrel the left barrel will fire with another pull of the trigger.



5- After shooting, open the shotgun by pushing the top lever fully to the right. Fired cartridges will be lifted for easy removal.

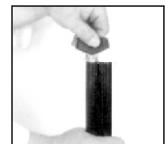

CHOKE TUBES

The choke constriction is designated by a series of notches at the muzzle end of the choke tube.

WARNING: Never check the choke designation, install choke tubes or remove choke tubes unless the gun is unloaded and the action is open




Choke Tubes : Best Usage	Full - Turkey
	Imp mod - Waterfowling
	Mod - Waterfowling, Upland Hunting
	Imp Cyl - Upland Hunting
	Cyl - Upland Hunting

6

www.cz-usa.com



Side by Side Shotguns

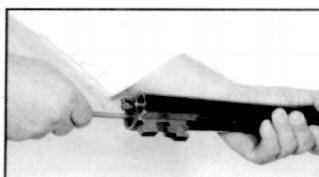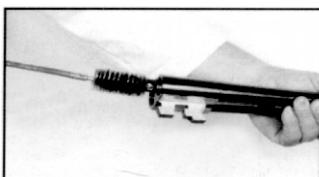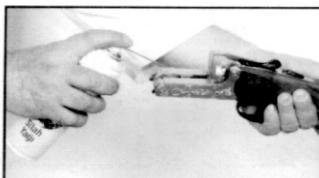


Apply grease as shown

- Clean the barrel bore by passing a swab or cleaning patch through it to remove residue. If necessary, use a cleaning rod with a bore brush soaked in bore cleaning solvent.
- Run a clean dry cloth through the bore to remove excess residue.
- Lightly oil the inside of the barrel with a clean patch coated with oil.
- Clean all exposed parts with a soft cloth and lightly oil.
- Apply a light coat of lubricant (preferably grease) to the connecting points of the receiver, barrels and forearm.
- Do not apply excess oil, grease or solvent. Excess cleaning fluids attract dirt, which can interfere with the function of the gun.
- Clean and lightly oil the external surface of the gun to remove any trace of dirt, moisture and fingerprints.


If you need further detailed maintenance contact a professional gunsmith.

Semi-Automatic Shotguns

ASSEMBLY

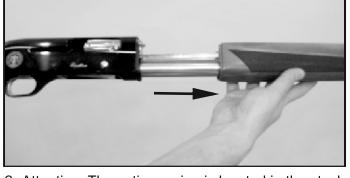


1 - Remove the magazine cap in front of the forearm by turning it counter-clockwise.

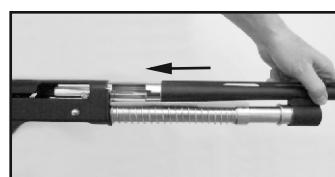


2- Attention: The action spring is located in the stock on 912 & 920 models, so spring will not be visible on the magazine tube.



3- Slide the barrel lug over the magazine tube.

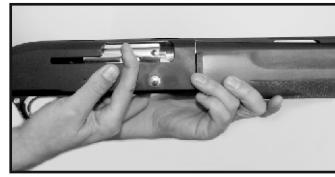

4- While assembling the barrel pull back the bolt handle approximately one inch to the rear, allowing for easier alignment of the barrel. Make sure the barrel seats completely into the receiver.

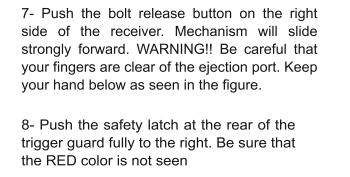

5- Assemble the forearm over the magazine tube and barrel. Make sure that the forearm is seated completely into the flange at the front of the receiver. Tighten the screw by turning clockwise.



6- Pull the cocking lever/bolt handle rearward until the action locks open.

7- Push the bolt release button on the right side of the receiver. Mechanism will slide strongly forward. **WARNING!** Be careful that your fingers are clear of the ejection port. Keep your hand below as seen in the figure.

8- Push the safety latch at the rear of the trigger guard fully to the right. Be sure that the RED color is not seen



Semi-Automatic Shotguns

LOADING



1 - With the metal part of the shell at the rear, insert shells into the magazine tube until they lock. Repeat the operation until you have loaded the desired amount of shells. Make sure to load only suitable cartridges according to your shotgun's caliber & chamber specifications.



3- Pull the bolt handle back until the bolt locks in the rearward position. Push the bolt release button as seen in the figure.

FIRING

*Push the safety to the left when you are ready to fire.


*You will see the RED color.

*Make sure your finger is not in contact with the trigger as you are taking the safety off.


*Now your shotgun is ready to fire.

*When you fire, your shotgun will automatically eject the fired cartridge and replace it with one from the magazine, until the gun is empty of ammunition.

*At this point, the bolt will remain locked open, indicating that all rounds have been fired.

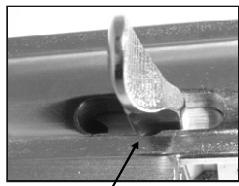

Semi Auto Bolt Handle shown in proper alignment for removal. Note the spacing of the bolt handle in front of the curved handle slot.

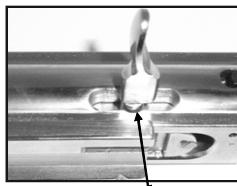

Bolt handle in the half way out position.

Semi-Automatic Shotguns

UNLOADING




1 - Pull the bolt handle to the rear to eject the round from the chamber



2- The bolt will return to the closed position.



3-Hold the carrier down and depress the feed latch.

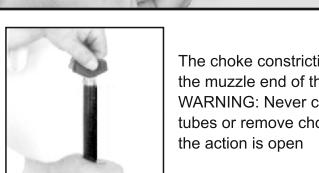

CHOKE TUBES

The choke constriction is designated by a series of notches at the muzzle end of the choke tube.

WARNING: Never check the choke designation, install choke tubes or remove choke tubes unless the gun is unloaded and the action is open

Choke Tubes : Best Usage



Full - Turkey

Imp mod - Waterfowling

Mod - Waterfowling, Upland Hunting

Imp Cyl - Upland Hunting

Cyl - Upland Hunting



REMOVING MAGAZINE PLUG

*The capacity of the shotgun is (4 + 1), but your shotgun is delivered to you as (2 + 1). You can change the capacity of the shotgun by removing the restrictor plug from the inside of the magazine tube.

*(901 & 920 models) First remove the magazine cap. Gently pry the magazine cap upward and remove. Finish with re-install the magazine plug.




Semi-Automatic Shotguns


MAINTENANCE



1- Un-screw the magazine cap.

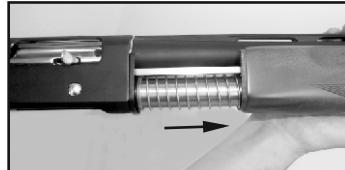

2- Remove the forearm by pushing it forward.

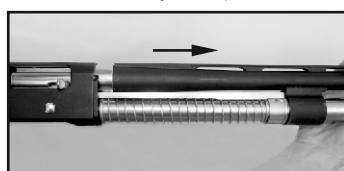

3- Dismantle the barrel by pulling forward and off the magazine tube.



4- O-ring is located inside the barrel ring so it's not visible on magazine tube



5- Slide the gas piston off the front of the magazine tube.



6- Push the latch under the trigger group (Loading figure 2/cartridge drop lever). Pull back the bolt handle. Clean the outer surface of magazine tube with a soft cloth.



7- Clean the inside and the outside of the piston using the same method.



8- Clean the gas ports on the Inside of the barrel lug. Clean inside of the barrel lug.

*Clean the barrel bore by passing a swab or cleaning patch through it to remove residue. If necessary, use a cleaning rod with a bore brush soaked in bore cleaning solvent.

*Run a clean dry cloth through the bore to remove excess residue.

*Lightly oil the inside of the barrel with a clean patch coated with oil.

*Do not apply excess oil, grease or solvent. Excess cleaning fluids attract dirt, which can interfere with the function of the gun.

*Clean and lightly oil the external surface of the gun to remove any trace of dirt, moisture and fingerprints.

*Push the bolt release button while holding the bolt handle and allow the bolt to close slowly.


Do not allow the bolt to close under force, since this may cause damage to the receiver.

To assemble your shotgun reverse the disassembly instructions


If you need further detailed maintenance contact a professional gunsmith.




Over & Under Diagram - Single Trigger

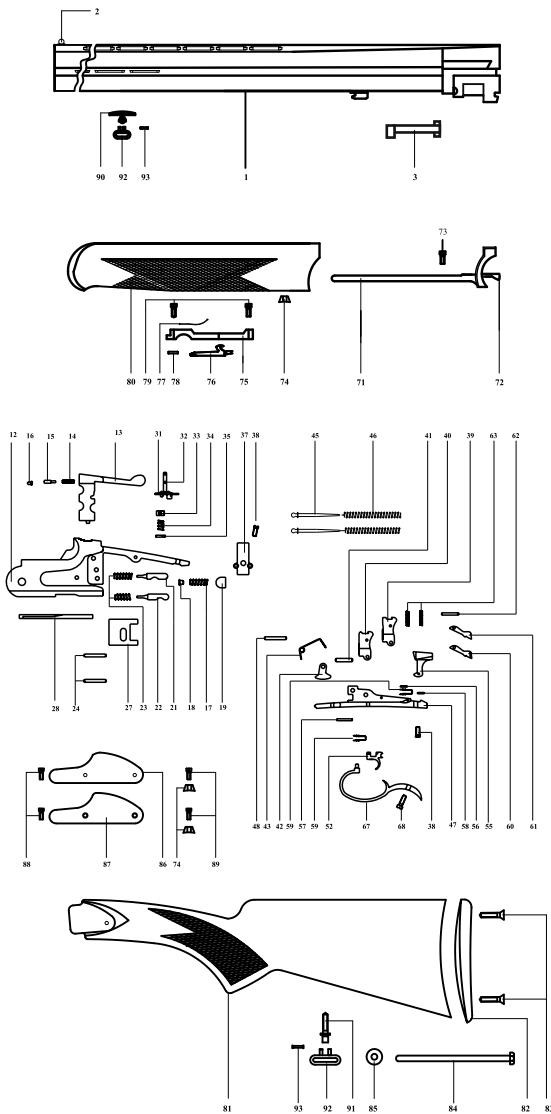


Over & Under Diagram - Auto Ejector Models

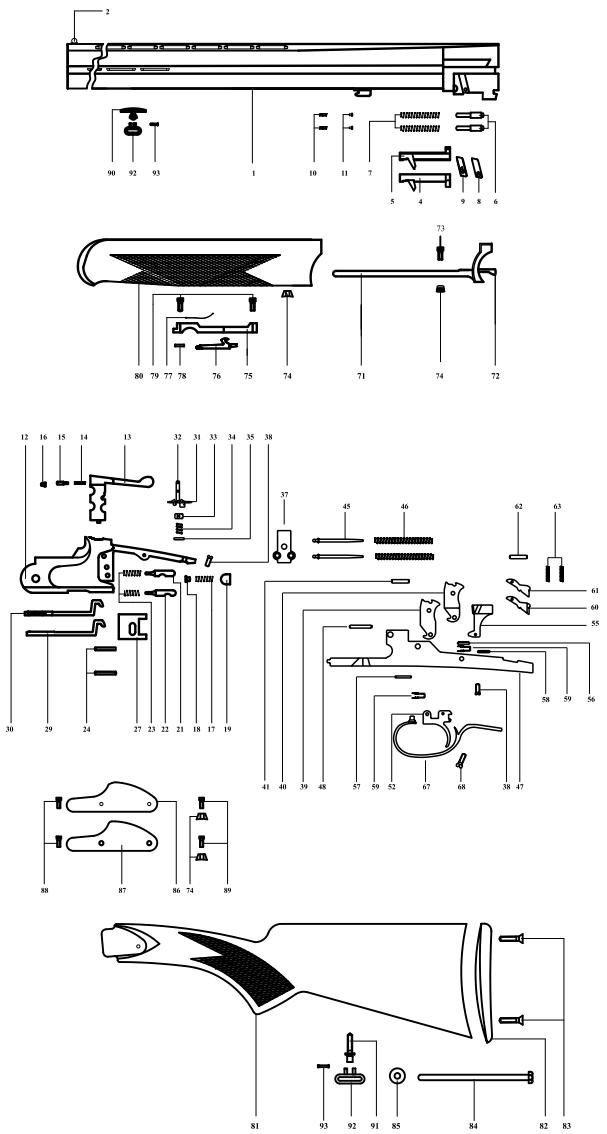


Over & Under Diagram - Upland Ultralight

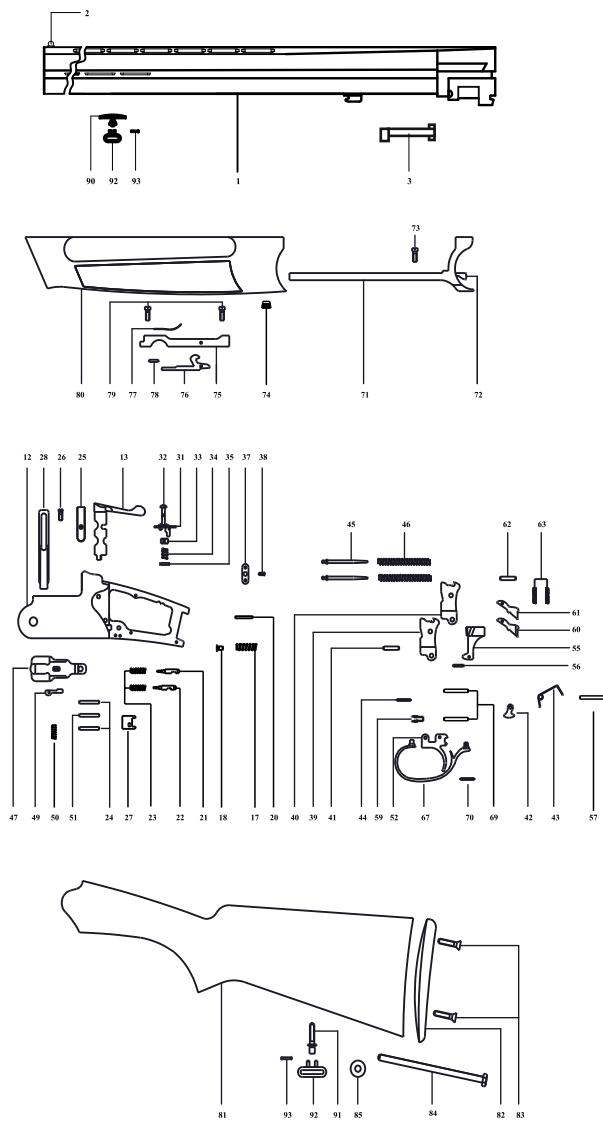


Over & Under Diagram - Mallard

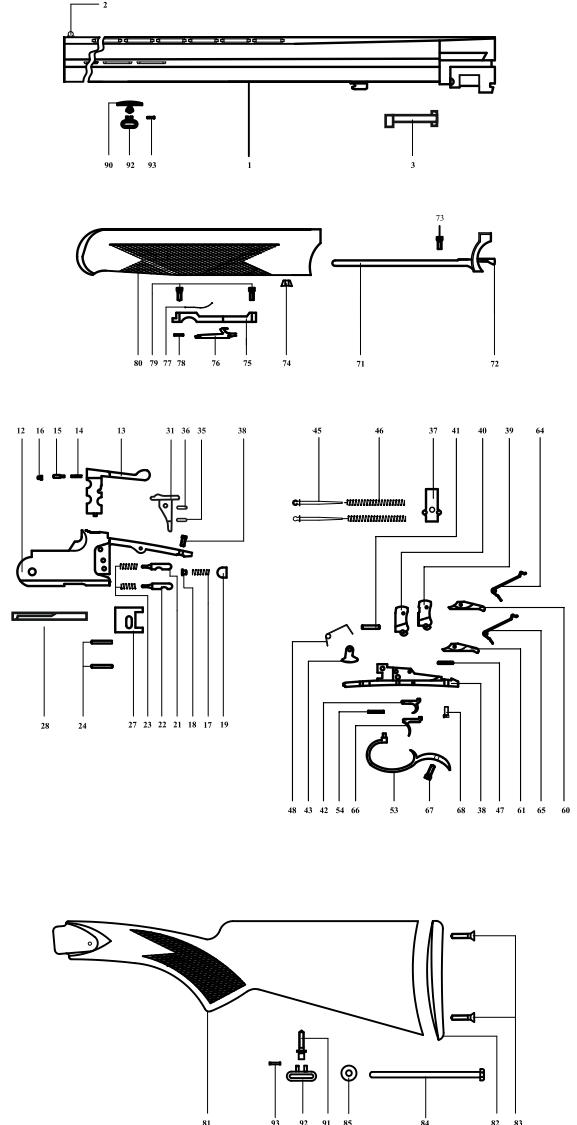


Side by Side Diagram - Single Trigger

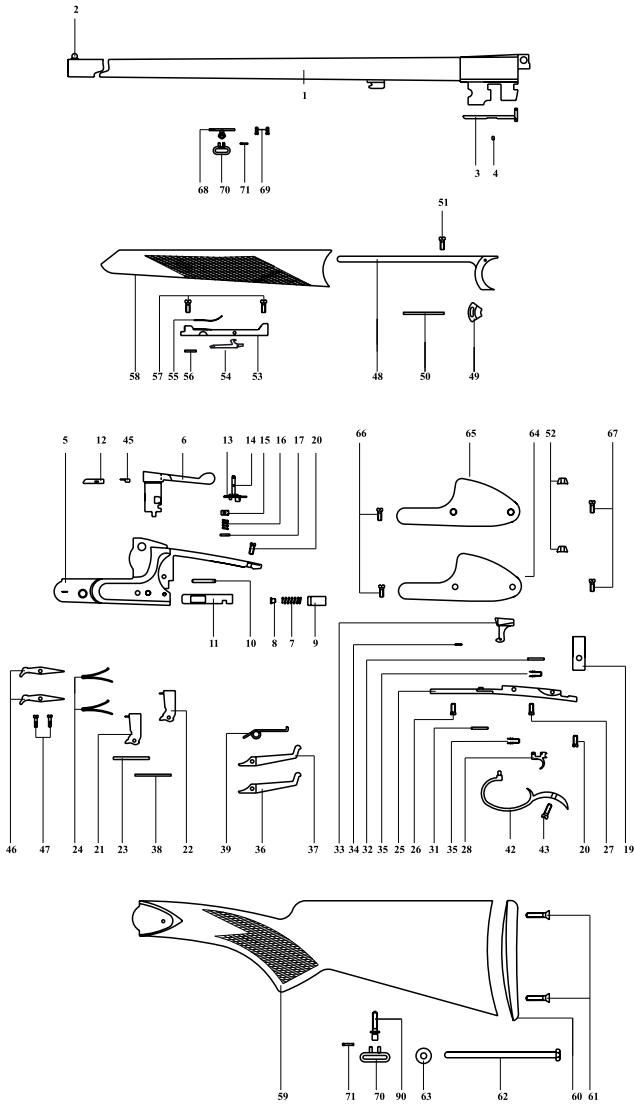


Side by Side Diagram - Double Trigger

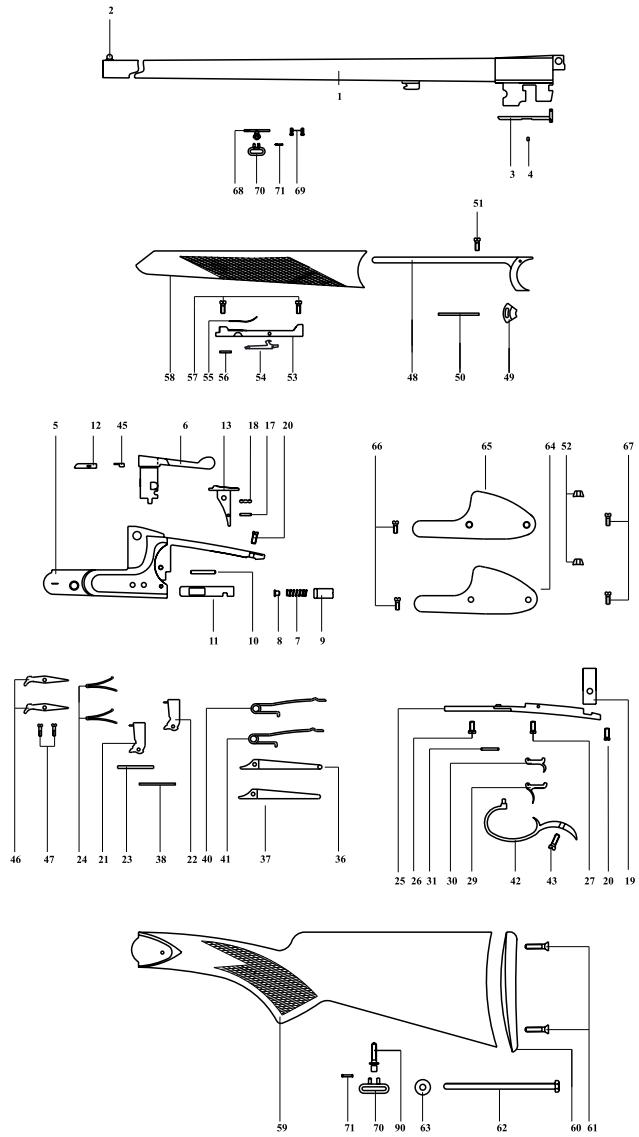


Side by Side Diagram - Hammer Guns

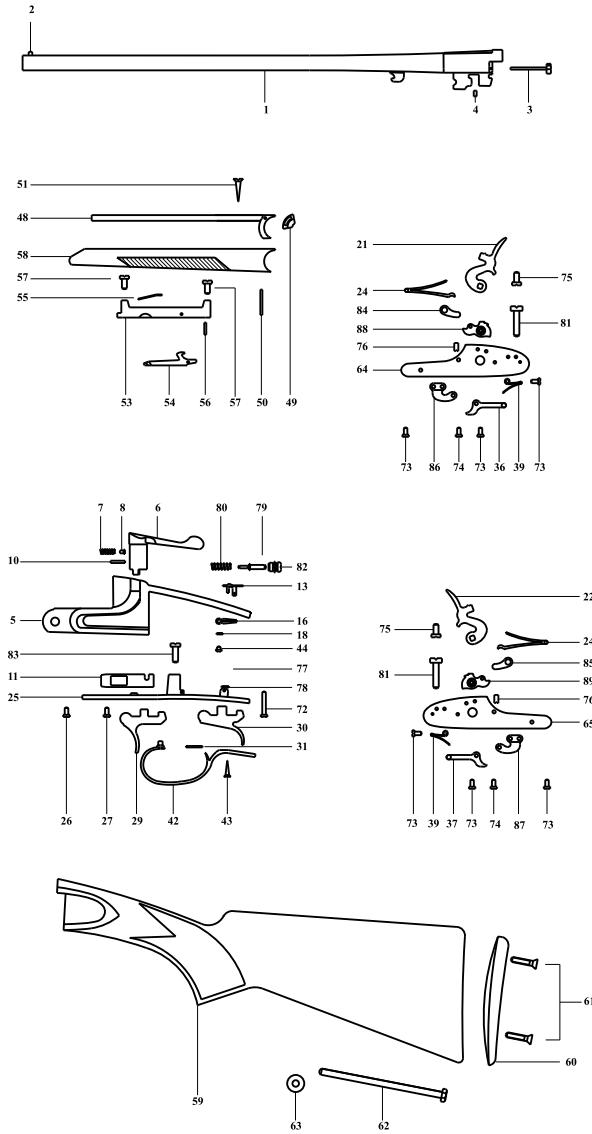

Semi-Auto Diagram - 712 & 720

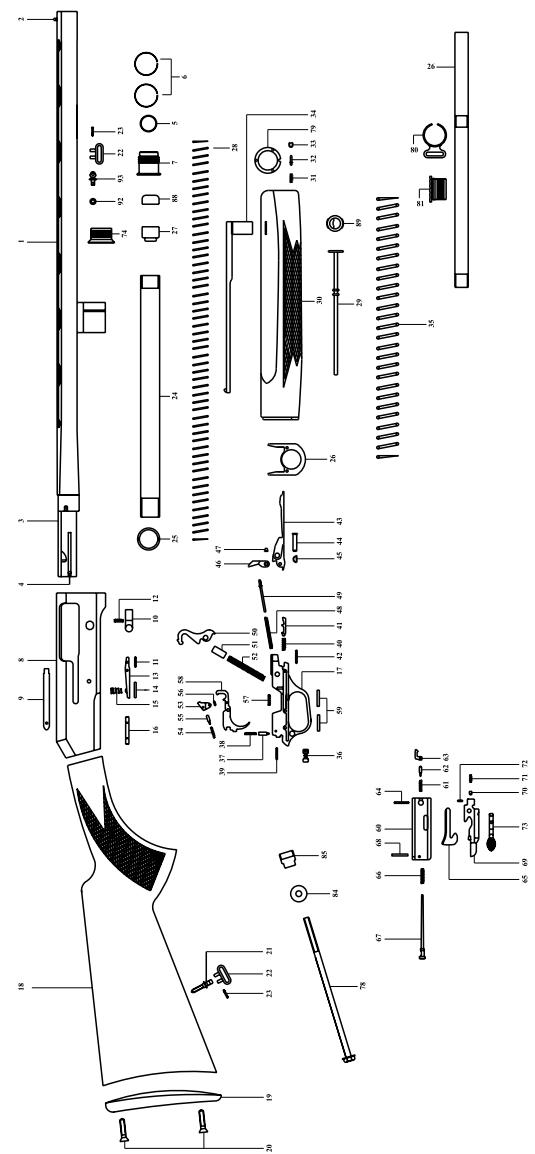

Semi-Auto Diagram - 912 & 920

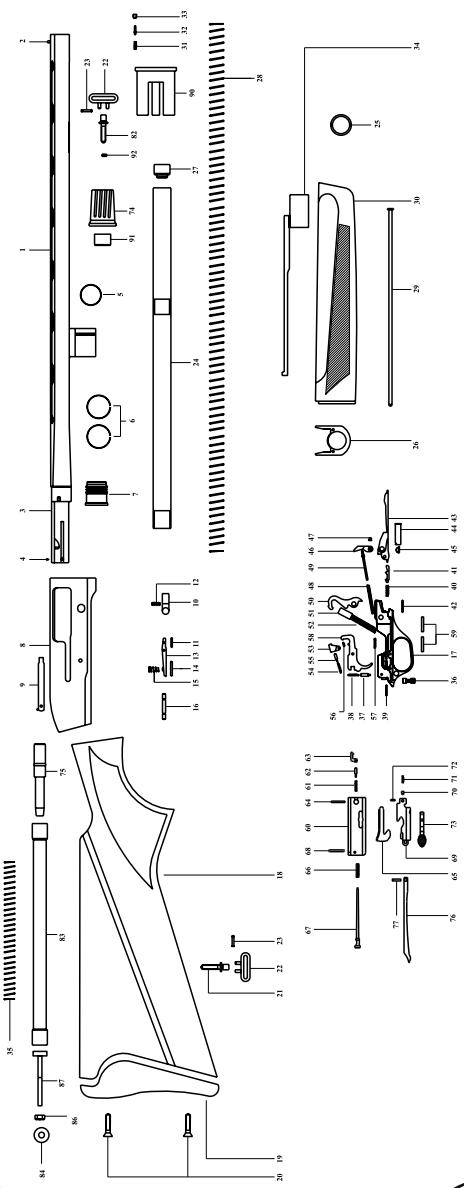

Over & Under Parts List

PART NAME	
1 BARREL	47 LOWER RECEIVER
2 FRONT BEAD	48 LOWER RECEIVER HAMMER PIN
3 NAIL	49 LOCKING BLOCK HOLDER
4 EJECTOR (TOP)	50 LOCKING BLOCK HOLDER SPRING
5 EJECTOR (BOTTOM)	51 LOCKING BLOCK HOLDER PIN
6 EJECTOR SPRING PIN	52 TRIGGER
7 EJECTOR SPRING	53 TRIGGER (RIGHT)
8 WEDGE (RIGHT)	54 TRIGGER (LEFT)
9 WEDGE (SOL)	55 SELECTOR
10 EJECTOR SEAR SPRING	56 SELECTOR PIN
11 EJECTOR SEAR PIN	57 TRIGGER PIN
12 RECEIVER	58 TRIGGER SPRING PIN
13 TOP LEVER	59 TRIGGER-SELECTOR SPRING
14 TOP LEVER PIN SPRING	60 SEAR (RIGHT)
15 TOP LEVER PLUNGER	61 SEAR (LEFT)
16 TOP LEVER SAFETY FIN	62 SEAR PIN
17 TOP LEVER SPRING	63 SEAR SPRING
18 TOP LEVER SPRING RETAINER	64 SEAR SPRING (RIGHT)
19 TOP LEVER SPRING PLUNGER	65 SEAR SPRING (LEFT)
20 TOP LEVER SPRING PIN	66 TRIGGER INT-EXT SPRING
21 FIRING PIN (TOP)	67 TRIGGER GUARD
22 FIRING PIN (BOTTOM)	68 TRIGGER GUARD SCREW
23 FIRING PIN SPRING	69 TRIGGER GUARD PLATE PIN (FRONT)
24 LOWER RECEIVER - FIRING PIN PINTLE	70 TRIGGER GUARD PLATE PIN (REAR)
25 DAGGER	71 FOREARM IRON
26 DAGGER SCREW	72 FOREARM COCKING ARM
27 LOCKING BLOCK	73 ESCUTCHEON SCREW
28 COCKING ARM	74 ESCUTCHEON COVER SCREW
29 COCKING ARM (RIGHT)	75 TAKE DOWN LATCH BRACKET
30 COCKING ARM (LEFT)	76 TAKE DOWN LATCH
31 SAFETY	77 TAKE DOWN LATCH SPRING
32 SAFETY LEVER	78 TAKE DOWN LATCH PIN
33 SAFETY WASHER	79 TAKE DOWN LATCH SCREW
34 SAFETY SPRING	80 FOREARM
35 SAFETY SPRING PIN	81 STOCK
36 SAFETY PIN	82 BUTT PLATE
37 HAMMER SPRING PLATE	83 BUTT PLATE SCREW
38 TANG SCREW	84 STOCK BOLT
39 HAMMER (RIGHT)	85 STOCK BOLT WASHER
40 HAMMER (LEFT)	86 SIDE PLATE (RIGHT)
41 HAMMER PIN	87 SIDE PLATE (LEFT)
42 ROLLER	88 SIDE PLATE SCREW
43 ROLLER SPRING	89 SIDE PLATE COVER SCREW
44 ROLLER PIN	90 BARREL SWIVEL STUD
45 HAMMER SPRING PIN	91 STOCK SWIVEL STUD
46 HAMMER SPRING	92 SWIVEL
	93 SWIVEL SCREW

Side by Side Parts List

PART NAME	
1 BARREL	46 COCKING ARM
2 FRONT BEAD	47 COCKING ARM SCREW
3 EXTRACTOR	48 FOREARM IRON
4 EXTRACTOR SCREW	49 FOREARM COCKING ARM
5 RECEIVER	50 FOREARM COCKING ARM PIN
6 TOP LEVER	51 FOREARM WOOD SCREW
7 TOP LEVER SPRING	52 TAKE DOWN LATCH PIN
8 TOP LEVER SPRING PLUNGER	53 TAKE DOWN LATCH BODY
9 TOP LEVER SPRING RETAINER	54 TAKE DOWN LATCH
10 TOP LEVER LOCKING PIN	55 TAKE DOWN LATCH SPRING
11 LOCKING BLOCK	56 ESCUTCHEON PIN
12 LOCKING BLOCK PIN	57 ESCUTCHEON SCREW
13 SAFETY	58 FOREARM
14 SAFETY PLATE	59 STOCK
15 SAFETY RING	60 BUTT PLATE
16 SAFETY SPRING	61 BUTT PLATE SCREW
17 SAFETY SPRING PIN	62 STOCK BOLT
18 SAFETY PIN	63 STOCK BOLT WASHER
19 HAMMER SPRING PLATE	64 SIDE PLATE (RIGHT)
20 TANG SCREW	65 SIDE PLATE (LEFT)
21 HAMMER (RIGHT)	66 SIDE PLATE SCREW
22 HAMMER (LEFT)	67 SIDE PLATE COVER SCREW
23 HAMMER SPRING PLUNGER	68 BARREL SWIVEL STUD
24 HAMMER SPRING	69 BARREL SWIVEL STUD SCREW
25 LOWER RECEIVER	70 SWIVEL
26 LOWER RECEIVER PIN (FRONT)	71 SWIVEL SCREW
27 LOWER RECEIVER PIN (REAR)	72 LOWER RECEIVER REAR SCREW
28 TRIGGER	73 RESTRAINT SEAR SCREW
29 TRIGGER (RIGHT)	74 RESTRAINT SCREW
30 TRIGGER (LEFT)	75 HAMMER SCREW
31 TRIGGER PIN	76 HAMMER SPRING CONTRA SCREW
32 TRIGGER SPRING PIN	77 SAFETY INTERIOR
33 SELECTOR	78 SAFETY INTERIOR PIN
34 SELECTOR PIN	79 FIRING PIN
35 TRIGGER SELECTOR PIN	80 FIRING PIN SPRING
36 SEAR (RIGHT)	81 PLATE IMMOBILIZATION SCREW
37 SEAR (LEFT)	82 CROWN
38 SEAR PIN	83 LOWER RECEIVER INNER SCREW
39 SEAR-SELECTOR SPRING	84 HOLDER (RIGHT)
40 SEAR-SELECTOR SPRING (RIGHT)	85 HOLDER (LEFT)
41 SEAR-SELECTOR SPRING (LEFT)	86 RESTRAINT (RIGHT)
42 TRIGGER GUARD	87 RESTRAINT (SOL)
43 TRIGGER GUARD SCREW	88 PUMP (RIGHT)
44 SAFETY SPRING PIN	89 PUMP (LEFT)
45 TOP LEVER PIN PLUNGER	90 STOCK SWIVEL STUD

Semi-Auto Parts List

PART NAME	
1 BARREL	48 CARRIER DOG SPRING
2 FRONT BEAD	49 CARRIER DOG PLUNGER
3 BEARING BOLT	50 HAMMER
4 EJECTOR	51 HAMMER PLUNGER
5 RUBBER GAS RING	52 HAMMER SPRING
6 GAS PISTON WASHER	53 SEAR
7 GAS PISTON	54 SEAR SPRING
8 RECEIVER	55 SEAR PLUNGER
9 TRACER WADGE	56 SEAR PIN
10 BOLT RELEASE	57 TRIGGER SPRING
11 BOLT RELEASE PIN	58 TRIGGER
12 BOLT RELEASE SPRING	59 TRIGGER PIN
13 BOLT RELEASE LATCH	60 BREECH BOLT
14 BOLT RELEASE LATCH PIN	61 EXTRACTOR SPRING
15 BOLT RELEASE LATCH SPRING	62 EXTRACTOR SPRING PIN
16 TRIGGER GUARD PIN	63 EXTRACTOR
17 TRIGGER GUARD	64 EXTRACTOR RETAINING PIN
18 STOCK	65 LOCKING BLOCK
19 BUTT PLATE	66 FIRING PIN SPRING
20 BUTT PLATE SCREW	67 FIRING PIN
21 STOCK SWIVEL STUD	68 FIRING PIN RETAINER
22 SWIVEL	69 BOLT BLOCK
23 SWIVEL PIN	70 BOLT LEVER BLOCK PIN
24 MAGAZINE TUBE	71 BOLT LEVER BLOCK SPRING
25 FOREARM SUPPORT RING	72 BOLT LEVER BLOCK SPRING PIN
26 FOREARM PLATE RING	73 OPERATING HANDLE
27 MAGAZINE FOLLOWER	74 MAGAZINE CAP
28 MAGAZINE SPRING	75 ACTION PIPE
29 MAGAZINE PLUG	76 ACTION SUPPORTER
30 FOREARM	77 ACTION SUPPORTER PIN
31 MAGAZINE CAP SPRING	78 STOCK BOLT
32 MAGAZINE CAP PIN	79 MAGAZINE CAP SUPPORT
33 MAGAZINE CAP SCREW	80 7+1 SWIVEL
34 ACTION BAR	81 7+1 MAGAZINE CAP
35 ACTION SPRING	82 SWIVEL HOLDER
36 SAFETY	83 ACTION TUBE
37 SAFETY PLUNGER	84 STOCK BOLT WASHER
38 SAFETY SPRING	85 STOCK BOLT RECEIVER
39 SAFETY SPRING PLUNGER	86 STOCK BOLT RING
40 CARRIER SPRING	87 STOCK BOLT SCREW
41 CARRIER PLUNGER	88 MAGAZINE SPRING RETAINER
42 CARRIER RETAINING PIN	89 MAGAZINE PLUG RETAINER
43 CARRIER	90 PLUG PLATE
44 TRIGGER ASSEMBLY PIN SLEEVE	91 MAGAZINE CAP INTERIOR
45 TRIGGER ASSEMBLY PIN RETAINER	92 SWIVEL STUD RETAINER
46 CARRIER DOG	93 SWIVEL STUD
47 CARRIER DOG PIN	