

ULTRA PEPPER SPRAY SYSTEM



125 DECIBEL ALARM

Screams for attention even if you can't.



BRIGHT STROBE LIGHT

Confuses attackers and gives you a chance to get away.



POWERFUL PEPPER SPRAY

Sprays up to 15 feet with 2 million Scoville heat units of law enforcement-strength stopping power.



SPEED RELEASE

All of these features activate in less than one second.



FREE BELT CLIP

Attaches your Ultra Pepper Spray System to just about anything.

THESE ACCESSORIES CAN BE USED WITH YOUR ULTRA PEPPER SPRAY SYSTEM:

- Home Defense Wall Unit
- Vehicle Defense Unit
- Replacement Head
- Armband

OTHER RUGER PEPPER SPRAY PRODUCTS:

• Stealth Pepper Spray System	• Armor Case Pepper Spray	• Bear Repellent	• Pro Extreme Speed Release Pepper Spray
• Key Chain Pepper Spray	• Lipstick Pepper Spray	• Restraint	• Lockdown

Active Ingredient: 10% Oleoresin Capsicum. Strong inflammatory and irritant affects the mucous membranes (eyes, nose, throat) and skin. May cause eyes to close and difficulty breathing. Effects may last up to 45 minutes.

Restriction: Not to be sold to minors or where prohibited by law. Use of this product for other than self defense is a crime that may subject you to punishment under applicable law. Do not carry on any passenger aircraft.

Distributed by: Tornado Personal Defense Systems, Inc.
1465 Slater Road, Ferndale, WA 98248 | 877-460-0939

RHB001



WWW.RUGER.COM/TORNADO



RUGER®

ULTRA PEPPER SPRAY SYSTEM

HAVE A PLAN AND ALWAYS BE PREPARED!

ULTRA

Features:



Alarm



Strobe Light



Spray



Speed Release



Multiple
Carry Options



® Powered by Tornado®



RUGER®

WARNING: READ INSTRUCTIONS CAREFULLY PRIOR TO USE.

Notice: Possession and/or use of pepper spray may be prohibited or regulated in some states or locales. Improper use may result in criminal action, including but not limited to lawsuits, fines, prosecution and even imprisonment. Pepper spray should only be used in cases where you (or someone you are protecting) are in an unavoidable and threatening situation.

Exposure: KEEP OUT OF REACH OF CHILDREN. Severe irritant affects eyes, skin and respiratory areas. In case of exposure, rinse eyes with water. Wash skin thoroughly with soap and water. DO NOT RUB. Do not apply creams, salves or lotions. If symptoms persist after 45 minutes, call a physician.

Caution: Contents under pressure. Keep away from heat. Do not store above 120° F, below 32° F or in direct sunlight. Use caution when activating in windy conditions. Do not puncture or incinerate can. Do not carry on any passenger aircraft.

Please ensure that you are familiar with the operation of your Ultra Pepper Spray System, and that you are aware of the applicable laws in your area with respect to the use of this type of product.

1. Thumb Trigger	7. Release Button
2. Spray Nozzle	8. Alarm
3. Strobe Light	9. Actuator Clip
4. Pepper Spray	10. Strobe Actuator Tab
5. Finger Lock	11. Alarm Actuator Tab
6. Sliding Safety Door	



Disclaimer of Warranties: To the extent permitted by law, Ruger® and Tornado® shall not be liable for damage, injury, loss, direct or consequential including death arising out of the use of, or inability to use this product. No warranty is expressed or implied. Responsibility for safe and lawful use rests solely with the user.

Check Out These Great Ultra Pepper Spray Accessories:



WWW.RUGER.COM/TORNADO

ULTRA PEPPER SPRAY SYSTEM

1. For full visual instructions visit: www.ruger.com/tornado

WARNING When practicing do not remove:


- Two white actuator tabs
- One orange actuator clip

With the actuator tabs and clip in place, the Alarm, Strobe Light and Pepper Spray will not function, making it safe to practice and familiarize yourself with the operation of your Ultra Pepper Spray System.



2. Slide the clear plastic Safety Door down until it clicks into the open position.

Insert index finger pushing the Release Button to release the Ultra Pepper Spray System head into your hand.

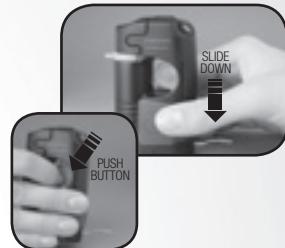

Practice this release until you are comfortable with this operation.

3. Your Ultra Pepper Spray System is designed to naturally release into your hand in the optimal position. The Finger Lock makes the device more difficult to remove from your grip. Your Pepper Spray will shoot from the Spray Nozzle at a slightly upward angle. A sweeping spray motion is most effective in ensuring you hit your intended target.

Point the Ultra Pepper Spray System head at the aggressor and press down firmly with your thumb on the Thumb Trigger to release the Pepper Spray. (Spray will not release as orange safety tab is still in place).



4. Now that you are familiar with the operation of your Ultra Pepper Spray System, it is time to activate the system.

- Remove the white tab to activate Alarm (alarm will now sound).
- Remove the white tab to activate Strobe (light will now strobe).
- Replace the head into the base (both Alarm and Strobe Light will automatically turn off).
- Slide the clear plastic Safety Door up until it clicks in the closed position.
- Repeat the release and replacement of your Ultra Pepper Spray System to ensure the activation is functioning properly.
- Remove the orange Pepper Spray actuator clip.

Your Ultra Pepper Spray System is now fully activated and in the safe position.