

TRADITIONS™

PERFORMANCE FIREARMS

1873 SINGLE ACTION BLANK PISTOL MODEL BP6003

LOADING, SHOOTING & CARE INSTRUCTIONS

WARNING

This blank pistol is chambered to fire only 209 shotgun primers. This pistol is not to be used with any loaded ammunition containing any type of projectile nor with any powder activated fastening devices. Damage to mechanism caused by shooting without 209 primers in the chambers will not be covered under warranty.

TO LOAD

Pull back hammer to the half-cock position to allow the cylinder to rotate. Open the loading gate located on the right side of the frame, behind the cylinder. Load a 209 shotgun primer into each of the chambers. Close the loading gate.

TO SHOOT

This blank pistol will only fire in single action which means when the hammer is pulled back to the full-cock position.

TO REMOVE CARTRIDGES

Place the hammer into the half-cock position. Slide the ejector rod lever back until the 209 primer is pushed out of the chamber. You will need to align the chamber hole with the ejector rod to slide it all the way back in order to push the 209 primer out.

CARE OF GUN

For many years of dependable service, the gun must be cleaned and oiled periodically and always after each use. Remove powder and dust traces from gun and cylinder chambers and place a drop of oil on all moveable parts. Apply the same oil to a soft cloth and wipe outside of gun for protection against rust.

WARRANTY


One (1) year limited warranty. You will need to retain an original purchase receipt to validate your warranty.

WARNING

- ALWAYS WEAR SAFETY GLASSES AND HEARING PROTECTION
- HANDLE THIS BLANK REVOLVER AS YOU WOULD ANY FIREARM
- KEEP OUT OF REACH OF CHILDREN
- NEVER AIM AT A PERSON OR ANIMAL

PARTS LIST

- | | |
|-------------------------------|----------------------------|
| 1. Extractor tube | 17. Cylinder stop |
| 2. Extractor screw | 18. Trigger spring |
| 3. Cylinder rod | 19. Trigger spring screw |
| 4. Cylinder | 20. Trigger |
| 5. Extractor rod | 21. Frame screw |
| 6. Extractor spring | 22. Backstrap |
| 7. Firing pin nut | 23. Hammer spring |
| 8. Firing pin spring | 24. Cylinder rod screw nut |
| 9. Firing pin | 25. Loading door |
| 10. Trigger screw | 26. Elevator |
| 11. Hammer screw | 27. Hammer |
| 12. Left grip | 28. Pin |
| 13. Grip screw | 29. Spring |
| 14. Cylinder rod spring | 30. Elevator spring |
| 15. Cylinder rod spring screw | 31. Right grip |
| 16. Frame | 32. Nut |

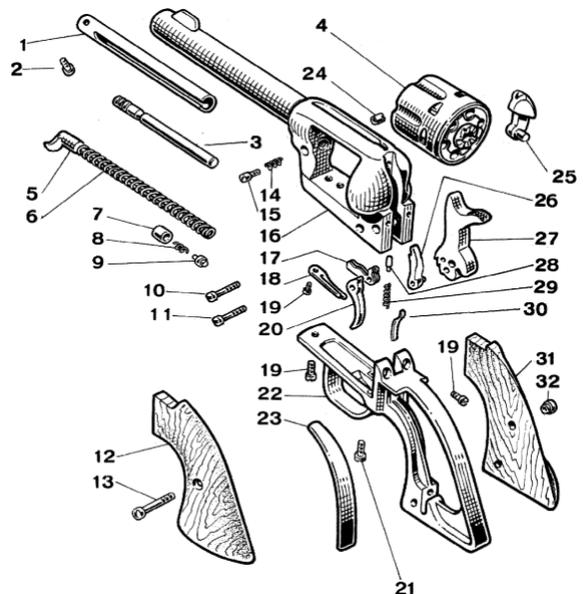

TRADITIONS™

PERFORMANCE FIREARMS

1/03 - 6003I

1375 Boston Post Road • P.O. Box 776 • Old Saybrook, CT 06475 • TEL: 860-388-4656 • FAX: 860-388-4657

www.traditionsfirearms.com