

CELPROG.TXT
NAM Programming (Reprogramming) Instructions

For 30+ Cellular Telephones

<--Part 1-->

Presented By:

/E/D/I/S/O/N///C/A/R/T/E/R/

Of

NETWORK 23
24 HOURS
1200/2400 BAUD
(402) 467-2474

PLEASE NOTE: Area specific numbers contained within these programming
instructions may not be accurate for your cellular area.

Programming Instructions for:

DIAMONDTTEL MESA90X HANDHELD

ACTION	TO STORE	DISPLAY
USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE - PRESS FCN 7 ENTER 4 DIGIT SECURITY CODE ENTER NEW 3 DIGIT UNLOCK CODE PRESS CLR		
PWR up unit Press "END" and hold within 10 seconds of pwr up Enter "5132920" Release END key.		
0	SEND	DUAL NO
XXXXXXXXXX	SEND	NO1
- - - - -	SEND	SID1
1	SEND	LU1

	CELPROG.TXT	
1	SEND	EX1
334	SEND	IPCH1
07	SEND	ACCOLC1
0	SEND	PREF1
10	SEND	GIM1
0	SEND	RI1
1	SEND	DTX1
1	SEND	AR1
1234	SEND	SEC
1	SEND	EE
1	SEND	C TONE
0	SEND	AL
0	SEND	BO
1	SEND	BEEP

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

TO RESET NAM FROM THE LIMIT OF 3 PROGRAM ATTEMPTS

PWR up unit

Press "END" and hold within 10 seconds of pwr up

TO RESET NAM OF MESA 90 HANDHELD USE THE CODE "6972814"

Programming Instructions for:

DIAMONDTTEL MESA99X HANDHELD

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
PRESS FCN 7

CELPROG.TXT

ENTER 4 DIGIT SECURITY CODE
ENTER NEW 3 DIGIT UNLOCK CODE
PRESS CLR

PWR up unit
Press "END" and hold within 10 seconds of pwr up
Enter "5132920"
Release END key.

0	SEND	DUAL NO
XXXXXXXXXX	SEND	NO1
- - - - -	SEND	SID1
1	SEND	LU1
1	SEND	MIN MARK1
334	SEND	IPCH1
07	SEND	ACCOLC1
10	SEND	GIM1
0	SEND	RI1
0	SEND	DTX1
0	SEND	AR1
1234	SEND	SEC
1	SEND	CONTINUE D.T.M.F.
0	SEND	AUTO LOCK
0	SEND	BOOSTER

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

Programming Instructions for:

GATEWAY CP 900 HANDHELD

CELPROG.TXT

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
CURRENT UNLOCK CODE CAN NOT BE SEEN AND MUST BE KNOWN TO CHANGE
THE CURRENT UNLOCK CODE.

PRESS MENU
ENTER 03
ENTER CURRENT 4 DIGIT SECURITY CODE
ENTER NEW 4 DIGIT SECURITY CODE
PHONE WILL AUTO EXIT TO READY

ACTION	TO STORE	DISPLAY
PRESS MENU 99 ENTR SCRTY CODE(FCTRY PRST IS 9999)		PROGRAM NAM
-----	SEND	SID
XXXXXXXXXXXX	SEND	PHONE NUMBER
0334	SEND	IPC
07	SEND	ACCOL
10	SEND	GIM
1	SEND	MOBILE I.D. NUMBER
1	SEND	LOCAL USE MARK
2	SEND	SYSTEM SELECT (B)

UPON PRESSING SEND THE PHONE WILL CYCLE TO WAIT AND THEN RETURN TO THE
READY MODE.

TO DISPLAY THE NEW PHONE NUMBER:

PRESS RCL 00

Programming Instructions for:

GENERAL ELECTRIC MINI II

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
PRESS FCN 7

CELPROG.TXT

ENTER 4 DIGIT SECURITY CODE
ENTER NEW 3 DIGIT UNLOCK CODE
PRESS CLR

PWR up unit
Press and hold END key within 10 seconds of pwr up
Enter "6282905"
Release END key

0	Press SEND	DUAL NO
XXXXXXXXXX	Press SEND	NO1
- - - - -	Press SEND	SID1
1	Press SEND	LU1
1	Press SEND	EX1
0334	Press SEND	IPCH1
07	Press SEND	ACCOLC1
0	Press SEND	PREF1
10	Press SEND	GIM1
0	Press SEND	RI1
1	Press SEND	DTX1
1	Press SEND	AR1
1234	Press SEND	SEC
1	Press SEND	EE
1	Press SEND	C DTMF
0	Press SEND	AL
0	Press SEND	BEEP
0	Press SEND	BO

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

CELPROG.TXT

Programming Instructions for:

GENERAL ELECTRIC MINI

ACTION TO STORE DISPLAY
USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
UNLOCK CODES WILL BE CHANGED ONLY IN PROGRAMMING MODE
FOLLOW THE INSTRUCTIONS THAT FOLLOW

PWR up unit
Press and hold CL key within 10 seconds of pwr up
Enter "7591122"
Release CL key

XXXXXXXXXX	PRESS SEND	MIN
123	PRESS SEND	UNLOCK
- - - - -	PRESS SEND	SID
1	PRESS SEND	LU
1	PRESS SEND	MIN MARK
334	PRESS SEND	IPCH
07	PRESS SEND	ACCOLC
0	PRESS SEND	PS
10	PRESS SEND	GIM
1	PRESS SEND	EE
0	PRESS SEND	BOOSTER
1	PRESS SEND	AR

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

Programming Instructions for:

CELPROG.TXT

mitsubishi 800

ACTION	TO STORE	DISPLAY
PWR up unit Press and Hold STO within 10 Seconds of pwr up Enter "5474432" Release STO		
0	Press SEND	dUAL
XXXXXXXXXX	Press SEND	NO1
- - - - -	Press SEND	SI d1
1	Press SEND	LU1
0	Press SEND	MIN Mark
0334	Press SEND	IPCH
07	Press SEND	ACCOLC
0	Press SEND	PS1
10	Press SEND	GI1
1234	Press SEND	SECURity
1	Press SEND	EE
0	Press SEND	dt
1	Press SEND	HF
0	Press SEND	InHIbit
1	Press SEND	C tOnE
0	Press SEND	SyS A/B
0	Press SEND	dUAL HS
0	Press SEND	InHibit Ld

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

Programming Instructions for:

MITSUBISHI 900

ACTION	TO STORE	DISPLAY
PWR up unit Press and Hold END key within 10 seconds of pwr up Enter "6972814" Release END key		
0	Press SEND	DUAL NO
XXXXXXXXXX	Press SEND	NO1
- - - - -	Press SEND	SID1
1	Press SEND	LU1
0	Press SEND	EX1
0334	Press SEND	IPCH1
07	Press SEND	ACCOLC1
0	Press SEND	PREF1
10	Press SEND	GIM1
0	Press SEND	RI1
1	Press SEND	DTX1
1	Press SEND	AR1
1234	Press SEND	SEC
1	Press SEND	EE
1	Press SEND	C DTMF
0	Press SEND	AL

0	CELPROG.TXT Press SEND	B0
1	Press SEND	BEEP

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME
 TO ENTER TEST MODE HOLD END ON PWR UP-CODE 0944635

Programming Instructions for:

MOTOROLA 8000H

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
 THIS FUNCTION IS PROVIDED IN STEP 9 OF THE PROGRAMMING
 MODE

PWR up unit
 Enter STORE #123456123456 RCL
 If the phone is fresh from factory then
 Enter STORE #000000000000 RCL
 If the phone is used or already programmed then
 Enter STORE #123456123456 RCL

DISPLAY WILL SHOW 01
 PRESS *

-- -- -- --	*	02 (SID)
XXX	*	03 (Area Code)
XXX XXXX	*	04 (Phone #)
14	*	05
07	*	06
00	*	07
123456	*	08
123	*	09

CELPROG.TXT

334	*	10
010100	*	11
000	*	

PRESS * TO REVIEW ENTRIES

TO BURN NAM: PRESS SEND WHILE 01,02,03, ETC. IS DISPLAYED

SET TO SCAN B MODE BY :

RCL * : PRESS * UNTIL SCAN B MODE SHOWS then:

press store

Programming Instructions for:

MOTOROLA ULTRA CLASSIC HANDHELD

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
THE UNLOCK CODE IS PROGRAMMED IN STEP 8 OF THE PROGRAMMING
MODE

FOR NEW PHONE: Press FCN, 0 + Security code entered twice (Factory
preset is 000000), RCL

The message 01 will appear in the display to confirm programming mode.

Press *		01	Press *
1) _ _ _ _ _	Press *	02	Press *
2) XXX	Press *	03	Press *
3) XXX XXXX	Press *	04	Press *
4) 14	Press *	05	Press *
5) 07	Press *	06	Press *

	CELPROG.TXT		
6) 10	Press *	07	Press *
7) 123456	Press *	08	Press *
8) 123	Press *	09	Press *
9) 0334	Press *	10	Press *
10) 010101	Press *	11	Press *
11) 101	Press *	12	Press *

Review entries by pressing "*" repeatedly.

Press SEND to program phone.

Programming Instructions for:

NEC P300

ACTION	TO STORE	DISPLAY
--------	----------	---------

THESE INSTRUCTIONS FOR SERIAL NUMBERS AFTER 135-839601

Insert NAM Programming Adapter (NECAM #41-2019) into plug connector on P300 phone bottom.

PWR On

RCL # 0 1 to enter test mode. Phone will display shaded blocks.

RCL # 7 6 to select NAM. Phone will show 76-
 Press 0 # to program NAM 1. (NAM 1=0,NAM 2=1,NAM 3=2,NAM 4=3)

RCL # 7 1 to enter programming mode.

XXXXXXXXXX	PRESS #	MIN
1234	PRESS #	LOCK CODE
— — — — —	PRESS #	SID
10	PRESS #	GROUP I.D.

	CELPROG.TXT	
0334	PRESS #	INITIAL PAGING CH
0	PRESS #	SYSTEM SELECT (1=A)
07	PRESS #	ACCOLC
1	PRESS #	MIN MARK 1
1	PRESS #	LOCAL USE
911	PRESS #	EMERGENCY NO.

Press Clr (and hold) to exit programming and return to TEST MODE.

Press RCL # 0 2 to burn and exit to standby.

THESE INSTRUCTIONS FOR SERIAL NUMBERS PRIOR TO 135-839601

Insert NAM Programming Cable (41-2019)

PWR on

RCL # 7 6 to enter TEST MODE

Press 0 # to select NAM.

RCL # 7 1

You are now in Programming Mode.

Enter NAM info as above.

Press and hold CLR to exit.

Pwr down.

Programming Instructions for:

NEC P9100

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
 UNLOCK CODES WILL BE CHANGED ONLY IN PROGRAMMING MODE
 FOLLOW THE INSTRUCTIONS THAT FOLLOW

Make sure NAM battery is fully charged before attempting programming
 Switch power on

CELPROG.TXT

Press RCL #01 display will then show shaded blocks

For a USED phone - to clear nam and accumulated call timer
Press RCL #39

To program NAM1
Press RCL #760#
To enter programming mode Press RCL #71

XXXXXXXXXX	Press #	MIN
1234	Press #	Lock Code
- - - - -	Press #	SYS. I.D.
10	Press #	G.I. Mark
0334	Press #	First Paging Channel
0	Press #	System Select
07	Press #	ACCOLC
0	Press #	MIN Mark
1	Press #	Local Use

TO EXIT PROGRAM MODE AT THIS TIME PRESS CLR AND HOLD
DISPLAY WILL SHOW TEST MODE

TO EXIT TEXT MODE PRESS RCL#02

IF THE MEMORY IS CLEARED VIA RCL #39 DURING THE PROGRAMMING THEN THE PHONE
WILL AUTOMATICALLY ENTER FULL-LOCK AFTER EXITING THE TEST MODE
TO UNLOCK: FCN #XXXX(4 DIGIT LOCK CODE FOR LAST NAM PROGRAMMED).

Programming Instructions for:

NOKIA P-30

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
PRESS SEL 7 UNLCODE APPEARS ON THE DISPLAY

CELPROG.TXT

ENTER 5 DIGIT SECURITY CODE AND THE CURRENT UNLOCK CODE APPEARS IN THE DISPLAY PRESS CLR AND ENTER THE NEW FOUR DIGIT UNLOCK CODE PRESS SEL TO STORE THE NEW CODE - NOTE: IF YOU DON'T PRESS SEL WITHIN FIVE SECONDS THE DISPLAY WILL CLEAR AND CANCEL THE FUNCTION

PWR up unit
Enter *17*2001*12345*
HO-Id must appear on display
Press SEL to view current value
Display will be one step behind TO STORE instructions

-----	Press SEL	ACCESS (SID)
1	Press SEL	LOCAL
1	Press SEL	PhonE n
XXXXXXXXXX	Press SEL	CLASS
10	Press SEL	PAGE ch
334	Press SEL	O-LOAd
07	Press SEL	GrouP
10	Press SEL	SEC
12345	Press SEL	AUTO EXIT PROGRAM MODE

TO EXIT PROGRAMMING MODE AT ANY TIME PRESS "END"

WHEN THE SEL KEY IS PRESSED FOLLOWING THE LAST PARAMETER VALUE, THE PHONE WILL AUTOMATICALLY EXIT THE NAM PROGRAMMING MODE AND RETURN TO NORMAL OPERATION

Programming Instructions for:

NOVATEL PTR800

ACTION	TO STORE	DISPLAY
--------	----------	---------

CELPROG.TXT

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
UNLOCK CODES WILL BE CHANGED ONLY IN PROGRAMMING MODE
FOLLOW THE INSTRUCTIONS THAT FOLLOW

PWR up unit

Press FCN

Press FCN again

Enter *626776*

Display will show CMT REV and a date code - Press Volume Up

Display will show NAM SELECT1 Press Volume Up

-- -- -- --	PRESS #	PRESS VOLUME UP	SIDH
		PRESS VOLUME UP	SCM
XXXXXXXXXX	PRESS #	PRESS VOLUME UP	MIN
0333	PRESS #	PRESS VOLUME UP	IDCCA
0334	PRESS #	PRESS VOLUME UP	IDCCB
0334	PRESS #	PRESS VOLUME UP	IPCH
07	PRESS #	PRESS VOLUME UP	ACCOLC
10	PRESS #	PRESS VOLUME UP	GIM
123	PRESS #	PRESS VOLUME UP	LOCK A
456	PRESS #	PRESS VOLUME UP	LOCK B
1	PRESS #	PRESS VOLUME UP	OPTION LC
1	PRESS #	PRESS VOLUME UP	OPTION EX
0	PRESS #	PRESS VOLUME UP	OPTION PS
0	PRESS #	PRESS VOLUME UP	OPTION NSC
1	PRESS #	PRESS VOLUME UP	OPTION EE
1	PRESS #	PRESS VOLUME UP	OPTION REP
0	PRESS #	PRESS VOLUME UP	OPTION HA
0	PRESS #	PRESS VOLUME UP	OPTION HF
0	PRESS #	PRESS VOLUME UP	OPTION F1
0	PRESS #	PRESS VOLUME UP	OPTION F2
0	PRESS #	PRESS VOLUME UP	OPTION F3
0	PRESS #	PRESS VOLUME UP	OPTION F4

TO EXIT PROGRAMMING MODE AT ANY TIME PRESS FCN END

FCN FCN *6462257* WILL CLEAR THE NAM IF IT HAS BEEN PROGRAMMED MORE THAN
3 TIMES OR IF THE NEED EXISTS TO CLEAR THE MEMORY

Programming Instructions for:

NOVATEL PTR825

ACTION

TO STORE

DISPLAY

CELPROG.TXT

PWR up unit
Press FCN
Press FCN again
Enter *697201*
Display will show CMT REV 972 105 Press Volume Up

1	PRESS # VOL UP	NAM SELECT 1
---	PRESS # VOL UP	SIDH
10	PRESS VOL UP	SCM
XXXXXXXXXXXX	PRESS # VOL UP	MIN
0333	PRESS VOL UP	IDCCA
0334	PRESS VOL UP	IDCCB
0334	PRESS # VOL UP	IPCH
07	PRESS # VOL UP	ACCOLC
10	PRESS # VOL UP	GIM
123	PRESS # VOL UP	LOCK A
123	PRESS # VOL UP	LOCK B
1	PRESS # VOL UP	LC
1	PRESS # VOL UP	OPTION EX
0	PRESS # VOL UP	PS - PREF SYSTEM
0	PRESS VOL UP	OPTION NSC
1	PRESS # VOL UP	OPTION EE-END TO END
1	PRESS # VOL UP	OPTION REP
0	PRESS # VOL UP	HORN ALERT
0	PRESS # VOL UP	HANDS FREE
0	PRESS # VOL UP	OPTION F1
0	PRESS # VOL UP	OPTION F2
0	PRESS # VOL UP	OPTION F3
1	PRESS # VOL UP	OPTION F4 AIR RND UP
0	PRESS # VOL UP	OPTION F5 FUTURE USE
0	PRESS # VOL UP	OPTION F6 FUTURE USE
0	PRESS # VOL UP	OPTION F7 FUTURE USE

Programming will now wrap to beginning SIDH display.
Press VOL UP to review entries

Programming Instructions for:

OKI HANDHELD MODEL # 750

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -

CELPROG.TXT

THIS FUNCTION IS PROVIDED FOR IN THE PROGRAMMING SEQUENCE

Pwr up unit
Press (*) and (#) simultaneously
Enter 10 digit Sec Code as follows: *12345678#
What follows can be done only once!

The display "Enter NEW PW-Sto"
Enter 0123456789 then press STORE

Pwr unit down.

Pwr up unit
Press MENU and RCL simultaneously
Enter 0123456789

Software Version and
ESN Number in HEX

Clears in 2 secs.

Spd Dial Mem Clear

Press 0

Press STO

Def Data Reset

Press 0

Press STO

NAM 1 Mode

Own #111 111-1111

XXX XXX XXXX

Press STO Vol Up Security

123456

Press STO Vol Up OPTION

1100

Press STO Vol Up SCM

1010

Press STO Vol Up GIM

10

Press STO Vol Up Unlock #

1234

Press STO Vol Up ACCOLC #

07

Press STO Vol Up IPCH NO.

0334

Press STO Vol Up

CELPROG.TXT
Press STO Vol Up System ID:

At this time you may exit the programming mode by pressing CLR to bypass the other NAM modules.

Programming Instructions for:

OKI HANDHELD MODEL # 900

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
THIS FUNCTION IS PROVIDED FOR IN THE PROGRAMMING SEQUENCE

Pwr up unit
Press RCL and MENU simultaneously
Enter 10 digit Sec Code as follows: *12345678#
What follows can be done only once!

The display "Enter NEW PW-Sto"
Enter 0123456789 then press STORE.
The display "Re-Enter New PW-Sto"
Enter 0123456789 then press STORE to enter Programming Mode.
IF You don't wish to keep the new password then Pwr unit down.

Software Version and
ESN Number in HEX

Clears in 2 secs.

Spd Dial Mem Clear

Press *	Press STO	SPD DIAL MEM CLEAR
---------	-----------	--------------------

Press *	Press STO	DEFAULT DATA CLEAR
---------	-----------	--------------------

NAM 1 Mode

Own #111 111-1111

XXX XXX XXXX	Press STO Vol Up	MIN
--------------	------------------	-----

123456	Press STO Vol Up	SECURITY
--------	------------------	----------

CELPROG.TXT

-----	Press STO Vol Up	SYSTEM ID:
0334	Press STO Vol Up	IPCH
07	Press STO Vol Up	ACCOLC #
15	Press STO Vol Up	GROUP I.D.
1234	Press STO Vol Up	UNLOCK CODE
1010	Press STO Vol Up	STATION CLASS
1110	Press STO Vol Up	OPTION

At this time you may exit the programming mode by pressing CLR to bypass the other NAM modules.

Programming Instructions for:

PANASONIC EB3500

Charged Battery and Nam Adaptor are needed.

ACTION	TO STORE	DISPLAY
USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -		
THIS FUNCTION IS PROVIDED FOR IN THE PROGRAMMING SEQUENCE		

*0000# to enter program mode

*1	Press SND	NAM 1 MODE
-----	Press STO 01	SIDH
XXXXXXXXXX	Press STO 02	OWNDL

CELPROG.TXT

0	Press STO 03	PRESYS
334	Press STO 04	IPCH
07	Press STO 05	ACCOLC
10	Press STO 06	GIM
00	Press STO 07	DLMT
10	Press STO 08	SCM
911	Press STO 09	SPDL
1234	Press STO 10	LOCK
1 1 0 1 1 0 0 0	Press STO 11	FCN 1
0 0 0 1 0 1 0 0	Press STO 12	FCN 2
1 1 1 1 0 1 1 1	Press STO 13	FCN 3

STO **
 END to program phone

Programming Instructions for:

COLT TRANSPORTABLE

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
 UNLOCK CODES WILL BE CHANGED ONLY IN PROGRAMMING MODE
 FOLLOW THE INSTRUCTIONS THAT FOLLOW

Phone must be locked, to accomplish: press FUNC 5
 Enter: FUNC #626# FUNC
 The software revision date will be shown.
 Press SEND
 This will advance phone through memory locations.
 E.S.N. will be displayed, press SEND again.

XXX	Press SEND	AREA CODE
-----	------------	-----------

	CELPROG.TXT	
XXX XXXX	Press SEND	PHONE NUMBER
- - - - -	Press SEND	SYSTEM ID
07	Press SEND	ACCOLC
10	Press SEND	GIM
1	Press SEND	LOCAL USE MARK
1	Press SEND	MIN MARK (MOBILE ID)
123	Press SEND	LOCK CODE
0	Press SEND	AUTOMATIC LOCK
123	Press SEND	CALL RESTRICTION
12	Press SEND	CALL COUNTER RESET
1	Press SEND	ENABLE HANDSFREE
0	Press SEND	DISABLE HORN ALERT
0	Press SEND	HA TURN OFF TIME
12	Press SEND	TOTAL AIRTIME RESET

TO REVIEW PROGRAMMING AT THIS TIME PRESS SEND.

TO EXIT PROGRAMMING AND STORE DATA AT ANY TIME PRESS
 END FUNC END - WAKE UP WILL SOUND, PHONE WILL BE LOCKED
 ENTER UNLOCK CODE- 123

SYSTEM PREFERENCE MUST BE KEYPAD SELECTED! PRESS FUNC 7 FOR "A" NON W/L
 OR PRESS FUNC 8 FOR "B" W/L SYS.

Programming Instructions for:
 DIAMONDTTEL MESA 55 TRANSPORTABLE

ACTION	TO STORE	DISPLAY
--------	----------	---------

CELPROG.TXT

PWR up unit
 Press "CL" and hold within 10 seconds of pwr up
 Enter "1951426"
 Current Mobile I.D. will display

XXXXXXXXXX	Press SEND		MIN
123	Press SEND	1	SECURITY
- - - - -	Press SEND	2	SID
1	Press SEND	3	LU
1	Press SEND	4	MIN MARK
334	Press SEND	5	IPCH
07	Press SEND	6	ACCOLC
0	Press SEND	7	PREF SYS
10	Press SEND	8	GIM
1	Press SEND	9	EE
1	Press SEND	10	ENBL HANDSFREE
0	Press SEND	11	RI
04	Press SEND	12	AUX 1
07	Press SEND	13	AUX 2

Phone automatically returns to show the 10 digits MIN number at this time and to indicate that the NAM has been programmed. The END key should be pressed to burn the NAM.

Programming Instructions for:

DIAMONDTTEL MESA95 TRANSPORTABLE

ACTION	TO STORE	DISPLAY
--------	----------	---------

PWR up unit
 Press and hold Clr within 10 Seconds of pwr up

CELPROG.TXT

Enter "1951426"
Release Clr

0	Press SEND	duaAL no
XXXXXXXXXX	Press SEND	no1
- - - - -	Press SEND	SIId1
1	Press SEND	LU1
1	Press SEND	E1
334	Press SEND	IPCH1
07	Press SEND	ACCOLC1
0	Press SEND	PS1
10	Press SEND	GI1
5	Press SEND	t InC1
1234	Press SEND	SECUrIty
1	Press SEND	EE
0	Press SEND	dt
0	Press SEND	HF
0	Press SEND	InHIbIt
1	Press SEND	Ctone
0	Press SEND	dIS CU
0	Press SEND	dIS IGn SEnSE
0	Press SEND	DUAL HS

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

TO RESET NAM FROM THE LIMIT OF 3 PROGRAM ATTEMPTS
FOLLOW THE BLOCK OF INSTRUCTIONS AT TOP USING "8291112" W/CLR

CELPROG.TXT

TO RESET NAM OF MESA 90 HANDHELD USE THE CODE "6972814"

Programming Instructions for:

FUJITSU MOBILE PHONE

ACTION	TO STORE	DISPLAY
PWR up unit Unit must be locked to program. To lock press F+LOCK PWR down unit. PWR up unit. Within 10 seconds press #626#7764726 (#NAM#PROGRAM) A continuous tone will be heard for 7 seconds. PRESS AND HOLD THE * KEY WHILE THE TONE SOUNDS, DO NOT LET GO! The tone will change to an intermittent tone, then it will stop. Release the * key.		
CONGRATULATIONS!!! YOU ARE NOW IN PROGRAMMING MODE!		
-- -- -- --	PRESS STOR	1 SIDH
1	PRESS STOR	2 LOCAL
1	PRESS STOR	3 MIN MARK
XXXXXXXXXX	PRESS STOR	4 MIN
10	PRESS STOR	5 STATION
0334	PRESS STOR	6 IPCH
07	PRESS STOR	7 ACCOLC
0	PRESS STOR	8 PS
10	PRESS STOR	9 GIM
1234	PRESS STOR	10 LOCK
1	PRESS STOR	11 CALL TIME

	CELPROG.TXT		
2	PRESS STOR	12	AUTO LOCK
1	PRESS STOR	13	CALL REST

PRESS STOR TO REVIEW ENTRIES.
 WHEN AT MODE #1 PRESS SEND TO BURN NAM AND RETURN TO NORMAL OPERATION.

IF PROGRAMMING WAS DONE INCORRECTLY A SHORT HIGH TONE WILL BE HEARD, YOU MUST THEN REPEAT DATA ENTRY. YOU MUST PRESS STOR AFTER EACH ENTRY FOR THE CHECKSUM FUNCTION TO BE FULFILLED.

Programming Instructions for:
 GENERAL ELECTRIC CARFONE XR3000

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
 THE UNLOCK CODE IS PROGRAMMED IN STEP 2 OF THE PROGRAMMING
 MODE

PWR up unit
 Press "CL" and hold within 10 seconds of pwr up
 Enter "923885"
 Serial # will display
 Press Send key to advance to first entry

XXXXXXXXXX	Press SEND	MIN
123	Press SEND	UNLOCK
- - - - -	Press SEND	SID
1	Press SEND	LU
1	Press SEND	MIN MARK
334	Press SEND	IPCH
07	Press SEND	ACCOLC
0	Press SEND	PS

	CELPROG.TXT	
10	Press SEND	GIM
0	Press SEND	AUX
1	Press SEND	HANDS

PRESS SEND TO REVIEW ENTRIES. NOTE: AREA CODE (402) WILL DISPLAY FOR MIN THEN AUTO SWITCH TO REST OF NUMBER ON DISPLAY - BE PATIENT

PRESS "E" KEY TO COMPLETE PROGRAMMING OF THE XR 3000 AT THIS TIME

Programming Instructions for:

GOLDSTAR SERIES 5000 MOBILE

ACTION	TO STORE	DISPLAY
PWR up Unit		
Press FCN 4 to see the selected NAM. Press * to advance. Select NAM1.		
Press FCN, 9, 9, * "Enter Code" will be displayed.		
Enter 1234567890		
XXXXXXXXXX	PRESS MEM	Enter MIN
- - - - -	PRESS MEM	Enter System ID
0334	PRESS MEM	Enter IPCH
07 (ACCOLC)	PRESS MEM	Enter OVLD Class
1234	PRESS MEM	LOCK CODE
123456	PRESS MEM	SECURITY CODE
1234	PRESS MEM	ALARM DISARM CODE
0	PRESS MEM	PREFERRED SYSTEM
0	PRESS MEM	STATION CLASS MARK
1	PRESS MEM	HANDS FREE MARK (ON)
1	PRESS MEM	LOCAL USE MARK (ON)

	CELPROG.TXT	
1	PRESS MEM	MIN MARK (ON)
0	PRESS MEM	HORN ALERT (OFF)
0	PRESS MEM	OPT. SPEAKER (OFF)
TO SAVE TO NAM NOW	PRESS MEM	

TO REVIEW ENTRIES USE THE VOLUME UP OR DOWN KEYS

Programming Instructions for:

MITSUBISHI 555,560,600

ACTION	TO STORE	DISPLAY
USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -		
TO PROGRAM THIS FUNCTION YOU MUST BE OUT OF THE PROGRAMMING MODE		
ENTER FCN 6 AND THEN ENTER THE NEW 3 DIGIT UNLOCK CODE		
PRESS CLR.		

To program from keypad remove and discard Nam Pad
PWR up unit
Press and Hold ST0 key within 10 seconds of pwr up
Enter "5474432"
Release ST0 key

XXXXXXXXXX	Press SEND	MIN
123	Press SEND	SECURITY CODE
- - - - -	Press SEND	SID
1	Press SEND	LU
1	Press SEND	MIN MARK
334	Press SEND	IPCH1
07	Press SEND	ACCOLC1
0	Press SEND	PS1
10	Press SEND	GIM

	CELPROG.TXT	
1	Press SEND	EE
1	Press SEND	HANDS FREE
0	Press SEND	ROAM INHIBIT
0	Press SEND	A/B SELECT
00	Press SEND	f3-f0 DUAL HEAD
00	Press SEND	f7-f4 LD INH

TO EXIT PROGRAMMING MODE PRESS "END" AT ANY TIME

Installing the LOCK CODE

To program the customer's lock code, the phone must be out of the programming mode.

To program, enter FCN, 6,3-digit security code, the a 3-digit lock code. Press CLR.

Programming Instructions for: NEC M3700 SERIES MOBILE

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
UNLOCK CODES WILL BE CHANGED ONLY IN PROGRAMMING MODE
FOLLOW THE INSTRUCTIONS THAT FOLLOW

A NAM PROGRAMMER ADAPTOR (NECAM #41-2012) IS
REQUIRED

PWR UP

TO ENTER TEST MODE:

RCL, #,0,1.	WILL CYCLE TO SHADED
-------------	----------------------

TO CLEAR MEMORY:

RCL # 3 9
select nam
RCL # 7 6 0 # nam 1
RCL # 7 6 1 # nam 2

CELPROG.TXT

TO ENTER PROGRAMMING MODE:

RCL #71

XXX XXX XXXX	PRESS #	Telephone No. (MIN)
1234	PRESS #	Lock Code
- - - - -	PRESS #	Home Area (SYS I.D.)
10	PRESS #	G-NO (Group I.D.)
0334	PRESS #	First Paging Channel
0 for wireline	PRESS #	System Select
07	PRESS #	ACCOLC
1	PRESS #	ACCESS
1	PRESS #	Local Use

To exit PROGRAMMING MODE PRESS CLR and hold TEST MODE will show
to exit TEST MODE RCL #02

IF MEM WAS CLEARED VIA RCL #39, PHONE WILL AUTOMATICALLY ENTER FULL-LOCK
AFTER EXITING THE TEST MODE.
TO UNLOCK PRESS FCN # 1234.

Programming Instructions for:

NOKIA LX-11

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
PRESS SEL,5 THEN ENTER 5 DIGIT SECURITY CODE
PRESS SEL TO RECEIVE DISPLAY OF CURRENT UNLOCK CODE
PRESS 5 NOW TO CLEAR ALL CALL TIMERS
ENTER THE NEW UNLOCK CODE
PRESS SEL TO ACCEPT

CELPROG.TXT

PWR up unit
Enter *3001#12345 Then - SEL 9 END
IdEnt IF InFO should appear on display

Pressing END will move you through the parameters
Pressing SND will toggle between choices available

-- -- -- --	Press END	HO-Id (SID)
1	Press END	ACCESS
1	Press END	LOCL OPT
XXXXXXXXXX	Press END	Phonxx
08	Press END	St CLASS
334	Press END	PAging Ch
07	Press END	O-LOAD CLASS
B	Press END	PrEF SyS
10	Press END	grOUP Id
12345	Press END	SECUrIty
----- (Can't be changed)	Press END	1 dAtE
00/00/90 (INSTALLATION DATE)	Press END	2 dAtE

TO EXIT PROGRAMMING MODE AT ANY TIME PRESS "END" TO STORE LAST PARAMETER
THEN POWER DOWN
WHEN THE "END" KEY IS PRESSED FOLLOWING THE LAST PARAMETER, THE TEXT
Prog donE WILL APPEAR ON DISPLAY

Programming Instructions for:

NOKIA M-10

ACTION TO STORE DISPLAY

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -

CELPROG.TXT

THIS FUNCTION IS PROVIDED BY THE SECURITY CODE PROGRAMMED AT THE TIME OF PROGRAMMING

PWR up unit
Enter *17*3001*1234*
HO-Id must appear on display
Press SEL to view current value
Display will be one step behind TO STORE instructions

-- -- -- --	Press SEL	ACCESS (SID)
1	Press SEL	LOCAL
1	Press SEL	PhonE n
XXXXXXXXXX	Press SEL	CLASS
08	Press SEL	PAGE ch
334	Press SEL	O-LOAd
07	Press SEL	GrouP
10	Press SEL	SEC
1234	Press SEL	AUTO EXIT PROGRAM MODE

TO EXIT PROGRAMMING MODE AT ANY TIME PRESS "END"

WHEN THE SEL KEY IS PRESSED FOLLOWING THE LAST PARAMETER VALUE, THE PHONE WILL AUTOMATICALLY EXIT THE NAM PROGRAMMING MODE AND RETURN TO NORMAL OPERATION

Programming Instructions for:

NOVATEL 8305 TRANSPORTABLE

CA08 SOFTWARE VERSION

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
IF EQUIPMENT IS PROVIDED WITH A MENU KEY THEN ENTER THE MENU PORTION OF THE PHONE AND DISPLAY AND IF NECESSARY REPROGRAM THE UNLOCK CODE FROM

CELPROG.TXT

THERE.

IF PHONE DOES NOT HAVE A MENU KEY THEN THERE CAN BE NO PROGRAMMING OF THE UNLOCK CODE... THE SECURITY CODE WILL BE ALL THAT IS PROVIDED

Lock Phone by pressing FCN 1
Enter Programming Mode by pressing #259

Screen will display the software revision number
Press Volume Up

Screen will display Phone's E.S.N.
Press Volume Up

Screen will display INIT REP USE SND
Press SEND to erase any numbers stored in the phones memory
Press Volume Up

-- -- -- --	Send Vol. Up	SIDH	system I.D.
XXX XXX XXXX	Send Vol. Up	MIN	mobile I.D.
Must be changed when done programming - BY CUSTOMER	Send Vol. Up	LOCK CODE 1	
Must be changed when done programming - BY CUSTOMER	Send Vol. Up	LOCK CODE 2	
SET	Vol. Up	Option EX	extnd adrss
334 press send to change	Vol. Up	IPCH	initial pge
07	Send Vol. Up	ACCOLC	overload
10	Send Vol. Up	GIM	group i.d.
333	Vol. Up	IDCCA	initl a
334	Vol. Up	IDCCB	initl b
1	Vol. Up	REG TBL	SIZE
Volume up through the four invalid System I.D. addresses			
SET	Vol. Up	OPTION LU	local use
B press send to change	Vol. Up	OPTION PS	(prefered sys)
CLR	Vol. Up	OPTION IRI	rm inhbt
CLR	Vol. Up	OPTION SSD	
SET	Vol. Up	OPTION QRC	qck rcall
SET	Vol. Up	OPTION QST	qck store
SET	Vol. Up	OPTION WUT	wake tone
SET	Vol. Up	OPTION EE	use dtmf
SET	Vol. Up	OPTION FD	use dtmf
SET	Vol. Up	OPTION MFD	ext dtmf
SET	Vol. Up	OPTION 32D	dgt dial
CLR	Vol. Up	OPTION MLH	timer
CLR	Vol. Up	OPTION LHM	timer
CLR	Vol. Up	OPTION CRU	timer dsp
CLR	Vol. Up	OPTION NLM	timer

SET for on CLR for off CELPROG.TXT
 CLR Vol. Up OPTION HA hrn alert
 Vol. Up OPTION ONL diagnosti
 END to exit or VOLUME UP to review entries.

Programming Instructions for:

OKI CDL400

ACTION TO STORE DISPLAY

To Enter Programming mode:

Press IN SEQUENCE:
 END RCL FUNC CLR SND

Screen shows Entr id

Enter 08693427

XXX XXX XXXX	PRESS #	PRESS *	PHon
- - - - -	PRESS #	PRESS *	S id no
0334	PRESS #	PRESS *	iPCH
07	PRESS #	PRESS *	ACC oLC
123	PRESS #	PRESS *	LoC Cod
10	PRESS #	PRESS *	G id
0000	PRESS #	PRESS *	Stn CLS
0111	PRESS #	PRESS *	HORN ALERT, HANDS FREE, LOCAL USE, MIN. MARK.

PRESS END AT THIS TIME TO EXIT PROGRAMMING MODE.

TO REPROGRAM TELEPHON NUMBER AND SYSTEM I.D. # -

PRESS IN SEQUENCE THE FOLLOWING KEYSTROKES:

FUNC 90 * 123 (SECURITY CODE)

PHon WILL DISPLAY

ENTER NEW PHONE NUMBER

XXX XXX XXXX	PRESS #	PRESS *	PHon
- - - - -	PRESS #	PRESS *	S id no

PRESS END AT THIS TIME TO EXIT PROGRAMMING MODE.

To Re-Initialize Nam Memory for Handset Programmable Models -
 Func 99*
 Enter Last 8 digits of S.N.
 Press *

Programming Instructions for:

PANASONIC EB362

Charged Battery and Nam Adaptor(Grey Cord w/25pin Connector)are needed.

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE - THIS FUNCTION IS PROVIDED FOR IN THE PROGRAMMING SEQUENCE

*0000# to enter program mode

*1	Press SND	
50	Press SND	NAM 1 MODE
- - - - -	Press ST0 01	SIDH
XXXXXXXXXX	Press ST0 02	OWNDL

CELPROG.TXT		
1 2 3	Press STO 03	LOCK
0 0 0 0 0 0 0 0 0 0 0 0 (12)	Press STO 04	SPDL
00	Press STO 05	SCM
334	Press STO 06	IPCH
07	Press STO 07	ACCOLC
10	Press STO 08	GIM
1 1 0 1 1 1 0 0	Press STO 09	FEATURE A
0 0 0 0 0 1 0 0	Press STO 10	FEATURE B
1 0 0 0 0 0 1 1	Press STO 11	FEATURE C
00	Press STO 12	DLMT
STO **		
Turn power off		

Programming Instructions for:

PANASONIC EB-500 OR TP-500

ACTION	TO STORE	DISPLAY
--------	----------	---------

USED EQUIPMENT: TO DISPLAY CURRENT UNLOCK CODE -
THIS FUNCTION IS PROVIDED FOR IN THE PROGRAMMING SEQUENCE

Attach Nam Programmer Cable (Our Stock # 823)

Pwr up unit

Enter *0000#	0
--------------	---

*1 SND
You are now in the NAM 1 Program mode.

- - - - -	Press STO 01	S.I.D.
-----------	--------------	--------

XXXXXXXXXX	Press STO 02	OWN #
------------	--------------	-------

	CELPROG.TXT	
0	Press STO 03	0 for W/L system
334	Press STO 04	IPCH
07	Press STO 05	ACCOLC
10	Press STO 06	GIM
00	Press STO 07	Digit Dial Limit
08	Press STO 08	SCM (3watt i.d.)
911	Press STO 09	Rcl 00
1234	Press STO 10	Security Code
11000000	Press STO 11	FUNCTION BYTE 1
00010010	Press STO 12	FUNCTION BYTE 2
10010111	Press STO 13	FUNCTION BYTE 3
TO BURN NAM AT THIS TIME	Press STO **	NAM is burned

Turn off unit
Detach programming cable

Programming Instructions for:

RADIO SHACK 17-1002 TRANSPORTABLE

THIS UNIT REQUIRES A SERVICE HANDSET TO BE PROGRAMMED!!!

A Mobira Service Handset (Modified) may be used. It is made from an ME53 or ME57 handset by opening and adding a jumper to the left of the one factory installed just below the white 24 pin connector joining the top and bottom PCB's. Also, pins 1 and 14 of the handset connector must be jumpered at the radio end. To disassemble the handset, carefully pry off the plastic earpad retaining housing to expose on hexdrive screw. Two other screws are under the rubber plugs at either side of the microphone. The handset then splits apart. This is a ticklish job and isn't recommended except in an extreme case and not with the customer's handset. The modification does not affect normal operation of the handset. It is not known if a Radio Shack handset will work the same.

CELPROG.TXT

After the Service Handset has been applied -

To enter LOCAL MODE (which takes the phone off the air and allows service commands to be obeyed) press 01#. The display should clear and noise is heard from the earpiece.

To enter the NAM programming mode, enter 48#. The display shows 48 briefly and clears.

ACTION	TO STORE	DISPLAY
0 _ _ _ _ _	PRESS *	(5 Digit SID)
1 1	PRESS *	
2 1	PRESS *	
3 XXXXXXXXXXX	PRESS *	
4 10	PRESS *	
5 334	PRESS *	
6 07	PRESS *	
7 0	PRESS *	
8 10	PRESS *	
9 12345	PRESS *	

Press * to exit NAM Programming Mode and return to Local Mode.

To enter the NAM reading Mode, press 49#. The display will show 49

Programming Instructions for:

RADIO SHACK 17-1003 TRANSPORTABLE

*17*1003* To enter program mode. If screen does not clear, enter 1234*

Screen

CELPROG.TXT

Programming Instructions for:

UNIDEN CP- 900 THRU 5000 SERIES MOBILES AND TRANSPORTABLES

THIS UNIT REQUIRES A PROGRAMMING HANDSET (MODEL CP-210 DIAGNOSTIC)

Make sure the unit is properly connected to a 13.8 volt supply (cig lighter) and power on after utility handset is attached.

Upon connecting utility handset to phone, the display will show 1 on the upper line and OP in the middle.

You are now in the TEST MODE!

Press SELECT, 2, SEND Top will show 2 0 and Current S.I.D.

You are now in the PROGRAM MODE

ACTION	TO STORE	DISPLAY
0 _ _ _ _ _	PRESS STORE	SID
1 1	PRESS STORE	LOCAL USE
2 1	PRESS STORE	ACCES METH (MIN MARK)
3 XXXXXXXXXXX	PRESS STORE	MIN
4 0334	PRESS STORE	INITIAL PAGING CH
5 07	PRESS STORE	ACCESS OVERLOAD
6 0	PRESS STORE	PREF SYS (0-B,1-A)
7 10	PRESS STORE	GROUP I.D. MARK
8 1234	PRESS STORE	LOCK CODE (SEE re:)
9 1	PRESS STORE	DTMF DURATION
A 0	PRESS STORE	AUTO SHUT-OFF

Enter the data for the selected item. If an error is made during data

CELPROG.TXT

entry the CLR key can be used to erase single keys.

PRESS SEND to burn NAM. Phone will display PASS. If FAIL is displayed you must repeat programming sequence.

To read the NAM (review) press SELECT 3 SEND. Enter RCL then the number of the item that you wish to view. Press the CLR key to exit and return to test mode.

TO VIEW THE SERIAL NUMBER OF THE UNIT BEING PROGRAMMED -

Press SELECT 4 SEND while in the Test Mode to display the phone's serial number in decimal form. The manufacturer ID (172) will be displayed on the top line while the remainder of the serial number will appear on the bottom line Press the CLR key to return to the Test Mode display.

DEFINITIONS:

XXX - Area Code or Prefix

XXXXXXXX - Prefix & Suffix

XXXXXXXXXXX - Area Code, Prefix, & Suffix

_ _ _ _ _ - Digits (One Line Per Digit [Sample To Left Is 5 Digits])

MIN* (Mobile Identification Number):
10 digit directory telephone number.

UNLOCK (Lock Code):
3 digit code to unlock radio (WARNING - The radio cannot be unlocked if this code is forgotten).
NOTE: You can read this code by using the programming procedure.

SID* (Home System Identification):
5 digit number for assigned cellular system.

LU* (Local Use):
0 or 1. 1=local control option and responds to local control messages.

MIN MARK* 0 or 1. 1=home station sends extended address information upon origination and page response.

IPCH* (Initial Paging Channel in Home):
3 digit number to identify the channel number of the first

paging channel when station is home.

ACCOLC* (Access Overload Class):

2 digit number to identify which overload class field controls the access attempts.

PS* (Perferred System):

0 or 1. 1=Preferred system is System A
0=Preferred system is System B

GIM* (Group Identification Mark):

2 digit number which indicates how many bits of SID, starting with the most significant, comprise the GIM.

AUX 0 or 1. 1=Auxiliary signal is enabled for horn relay. External adapter must be used for this feature.

HANDS 0 or 1. 1=Handsfree feature is enabled. External adapter must be used for this feature.

ALT LOCK (Alternate Lock Code):

3 digit lock code to be used with the partial lock feature. This feature is active only with the GE CF-2000 and CF-2500 Carfone models.

This entry is ignored for GE CF-1000 Carfone models.

*These values are Cellular System dependent. Entering an incorrect value will deny service on the system.

* * * * * W A R N I N G * * * * *

When a cellular phone transmits, it sends its Electronic Identification Number and its assigned telephone number back to the cellular phone companys computer. This leaves an electronic trail. If the phone is registered to you and you change the phone number you run a risk of being tracked by the Electronic Identification Number.

If the phone is not registered to you, you can be tracked by the numbers you call frequently. It wouldn't be very smart to phone home to see how the little woman is doing or check to see if the latest software came on UPS. And remember, when you use a cellular phone it goes out over the airways. This means anyone with the know-how can listen to you. All some people need is a juicy bit of information and a phone number and you leave yourself open to all kinds of scams, blackmail, and legal problems.

CELPROG.TXT


* * * M O R E * N O T E S * * *

Most cellular companys do not turn off the numbers that are not in use. Better yet I do not know of a company that tracks numbers that are not assigned. They seem to keep the low numbers filled in. When someone turns in a phone they reassign that number instead of a new number. If you put a number in your phone, use a high number. Chances are it is not assigned to anyone. The calls you make on a unassigned number usually will go unnoticed. Better yet monitor the number you wish to use with a scanner for a period of time to check for activity.

Happy foning.....

* * * * *
NETWORK 23 BBS, 24 HOURS, 1200/2400 BAUD, (402) 467-2474
* * * * *

This file was downloaded from.....

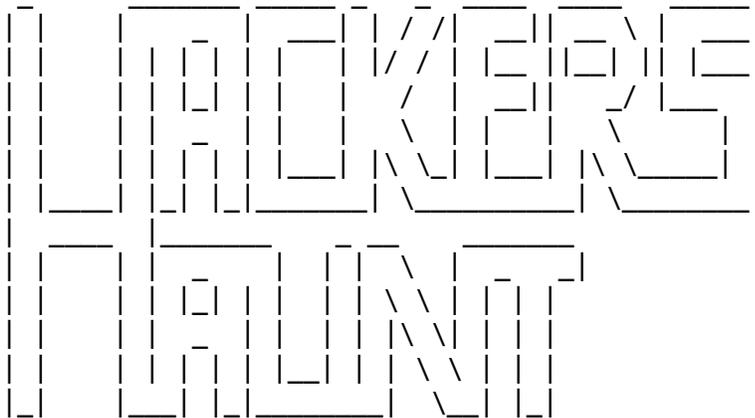

Call [UK] 081-656-1517
Worldwide +44 81 656 1517
24hrs!!

Downloaded From P-80 Systems 304-744-2253