

## Owner's Manual

# RAPiD™ SAFE



Item No. 98150





# READ THIS FIRST

**Warning:** NEVER store a loaded firearm in the Hornady Security™ RAPiD™ safe under any circumstances. The risks associated with storage of a loaded firearm include, but are not limited to, unintentional discharge upon insertion or removal of the firearm. Unintentional discharge may result in bullet and safe fragments dispersing in multiple directions, which may cause serious injury or death. Hornady Security™ is not liable for any misuse of the RAPiD™ safe.

**Warning:** No safe is entirely secure. The RAPiD™ safe is only as secure as your maintenance of the combination code, keys, and RFID tags. You are solely responsible for maintaining your combination code, keys, and RFID tags. Never write down your combination code. Keep your keys and RFID tags in a secure location at all times. Store your RAPiD™ safe in a secure location away from your keys and RFID tags. Hornady Security™ is not liable for unauthorized access, including damage to, or loss of property, or personal injury. Again, NEVER store a loaded firearm in your Hornady RAPiD™ safe, as this may result in unauthorized access to the loaded firearm.

**Warning:** Except as expressly provided in the RAPiD™ Safe Limited Warranty, Hornady Security™ is not liable for any expense or damage associated with your inability to open the RAPiD™ safe. Electronic systems may fail. Verify that the keys furnished operate the lock. Keep your keys in a secure location at all times. For your security, Hornady Security™ WILL NOT send replacement keys.

**Warning:** Hornady Security™ is not liable for any loss, theft, or damage to personal property. The RAPiD™ safe is not intended to protect the contents from fire, water, humidity, or other environmental conditions. Do not, under any circumstances, return the RAPiD™ safe to Hornady Security™ with any personal property inside.

## Important Information

- **RFID Tag** refers to the chip in any of the RFID “keys” included with the RAPiD™ safe (bracelets, key fob or card).
- For trouble-free operation of your RAPiD™ safe, please read and understand all instructions before use.
- Questions? Call our tech line at 800-338-3220.
- **Never store loaded firearms in the RAPiD™ safe. Follow local laws for firearm storage.**

## Table of Contents

Warnings and Important Information .....	Page 2
Items Included .....	Page 3
Setup and Operation .....	Page 4
Warranty .....	Page 9
Product Registration and Service .....	Page 10
Frequently Asked Questions .....	Page 10
Mounting Template .....	Page 11

## Items included with your RAPiD™ Safe

1. RAPiD™ Safe
2. Wall Power Supply (*including 220 Volt Adapter for European Usage*)
3. Three (3) RFID Bracelet Tags (*One of each size: M, L, XL*)
4. One (1) RFID Card Tag
5. One (1) RFID Key Fob Tag
6. Two (2) Circular (Barrel) Keys
7. Security Cable

*Not Pictured:*

- Owner's Manual
- Warranty Card
- Hornady® Decal Magnet



Exterior: 15½" x 9" x 3½"

Interior: 11" x 8" x 3"

Weight: 15.65 lbs

Power: 12V 1.0A



# RAPiD™ Safe Setup and Operation

Congratulations on purchasing the technologically advanced RAPiD™ safe. You have taken a significant step in securing the safety of your handgun.

To achieve the best experience with your RAPiD™ safe, please read all instructions carefully, and understand its operation.

**After the RAPiD™ safe has been taken out of the box, please check to be sure the circular (barrel) key fits and unlocks your RAPiD™ safe (See page 7 for Manual Lock information). Contact Hornady® at 800-338-3220 if the key does not work.**

## Combination Code

Your safe's factory preset combination code is **1-2-3-4-ENTER**.

## Opening and Closing RAPiD™ Safe

Open your safe by plugging the unit into an electrical outlet. Enter the factory preset code: **1-2-3-4-ENTER**.

Close the safe by pressing the lid down until its bolts are engaged.


**NOTE: NEVER close the safe until the latch motor has returned to home position.**



## Changing the Combination Code

**To create a new 4, 5, or 6 digit code:**

1. Open your RAPiD™ safe.
2. Locate the three small program buttons on its inside right corner.
3. Press the top white button.
4. When the amber status light on the front keypad blinks, the system is ready to receive your code.
5. Key in your preferred 4 to 6 digit code, and press ENTER.
6. The keypad will blink twice, indicating your code has been correctly saved.
7. WITH THE LID OPEN, test the code. If the motor does not run, repeat steps 2 through 7.

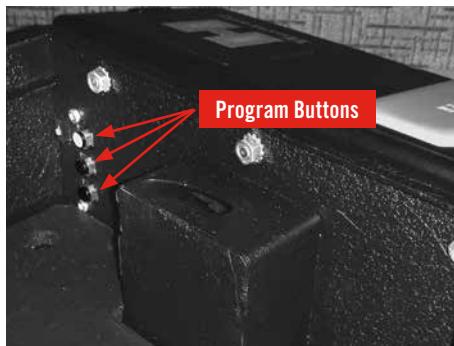

**NOTE:** Keypad is equipped with an anti-tamper feature that disables the keypad for 2 minutes upon 5 consecutive incorrect keypad code entries. This feature does not disable normal opening function using RFID Tag.

## RFID Tags

Your RAPiD™ safe includes five (5) different RFID tags, including:

- 3 Bracelets (M, L, XL)
- 1 Key Fob
- 1 Card

**The safe's system can only store up to two (2) different tags at a time.** Only two tags can be programmed for use. The remaining three tags will be inert, but can be circulated as one of the programmed tags if you choose to use them later, i.e., you can program two bracelets, or one bracelet and the card, but no more than two tags may be programmed for use at any given time.

### How To Change Your RFID Tags


The RAPiD™ safe can store up to 2 tags.

To program these tags:

1. Open your RAPiD™ safe.
2. Locate the three small program buttons on the inside right corner.
3. Press the middle (black) button to program your FIRST RFID tag. Choose one of the five tags listed above.
4. When the amber status light on the keypad blinks, the system is ready for your RFID tag.
5. Place the RFID tag approximately 1/2" over the RFID reader (H logo) that is located on the front panel of the safe.
6. Wait for the status light to display green.
7. Remove the tag from the RFID reader on the front panel of the safe.
8. **WITH THE LID OPEN**, test the tag by placing it approximately 1/2" over the RFID reader. If you do not hear and see the motor activate, repeat steps 2 through 8.
9. The second RFID tag can be programmed by pushing the third, lowest (black) button inside the box and following the steps above.



*Choose the two RFID entry methods (tags) you prefer, and program them for use.*

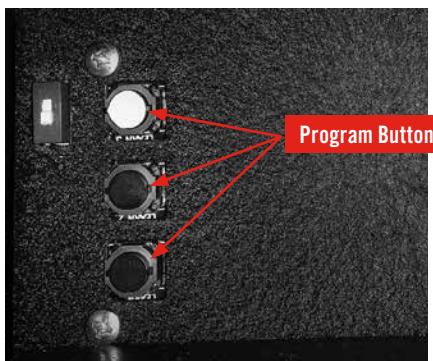

## Battery Power Mode

When the RAPiD™ safe is unplugged, and is operating on battery power, **you must press the ENTER key to activate system.**

Pressing the ENTER key causes the system to achieve ready status. This includes RFID tag reading and keypad operation.

**For example:** To open your safe with an RFID tag, while the system is running on battery power, first press the ENTER key to bring it to ready status. Place your RFID tag approximately 1/2" over the RFID reader to open the safe.

To open your safe with your keypad code, first press the ENTER key to bring it to ready status. Enter your code on the keypad followed by ENTER, to open the safe.




### Keypad Status Light Codes

When the light displays:	It means:
Solid Red	The system is powered and ready.
Blinking Amber	The system is ready to program.
Solid Amber	The battery is low. Replace batteries immediately.
Solid Green	The system is unlocking.

## Backlit Reader

Your safe's backlit reader remains on while the system is plugged into an electrical outlet, unless you switch it off. The backlit reader will switch off when the system times out for 20 seconds under battery power only.

To turn the light off (when using electrical power), open the safe, and locate the on/off switch next to the white program button.

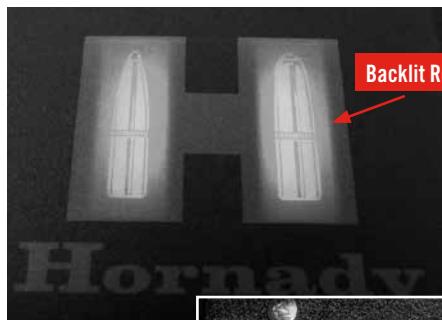

## Manual Lock

The mechanical key lock is located under the keypad panel. To manually unlock the RAPiD™ safe, carefully remove the keypad panel by pushing the locking tab toward the “H” and then lifting up, carefully protecting the attached wires. Press the safe lid down while turning the key to unlock the unit.



## Left-Hand/Right-Hand Feature

To reverse the keypad panel for opposite hand usage, press the side-locking tab and reverse the keypad panel, carefully protecting the attached wires.


## Batteries

For backup or mobile use, your safe requires eight AA batteries (not included). To install or replace batteries, carefully remove the keypad panel and battery case cover. Only use new alkaline AA batteries. Verify the battery pack is plugged in. Replace all batteries at the same time.

**NOTE:** The RAPiD™ safe is not designed to operate on a 9V battery.

**NOTE:** Solid Amber status light indicates low battery. Batteries should be replaced immediately.



**NOTE:** Replace batteries every 12 months.

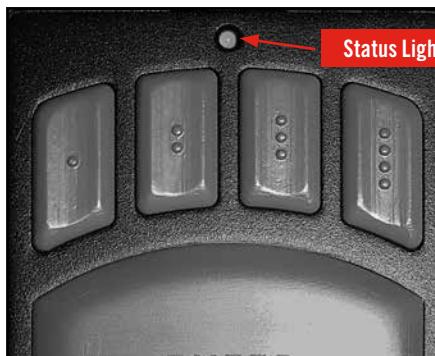


## Removing & Reinstalling the RAPiD™ Sleeve

The RAPiD™ sleeve accommodates most 5-inch pistols, and 4-inch barreled revolvers. Removing the RAPiD™ sleeve can accommodate larger handguns or other valuables.

To remove the sleeve, lift the levers located on each side of the sleeve, and pull it out. Reinstalling the sleeve is just as simple. Make sure the levers are up and push the sleeve in place, aligning the notches with the bar. Press the levers down to lock the sleeve in place. Remove and reinstall the sleeve a few times to become familiar with the process.

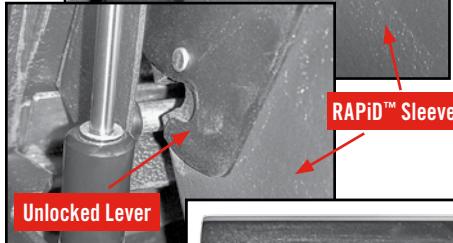
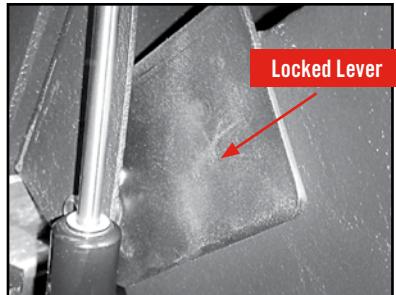


RAPiD™ Safe  
without Sleeve

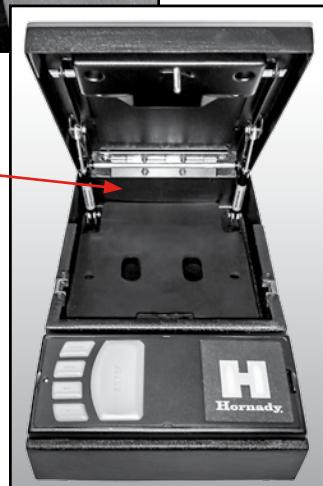

## Security Cable

The RAPiD™ safe includes a security cable, that can be looped around a stationary object. With the safe cover open, place the lug end of the cable into the security cable slot and close the lid.

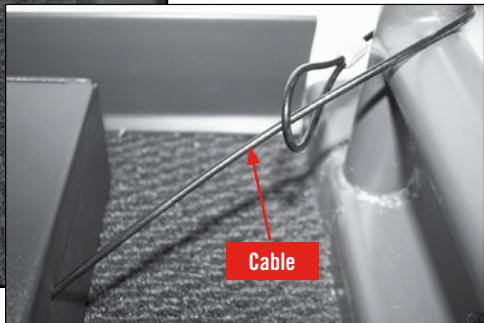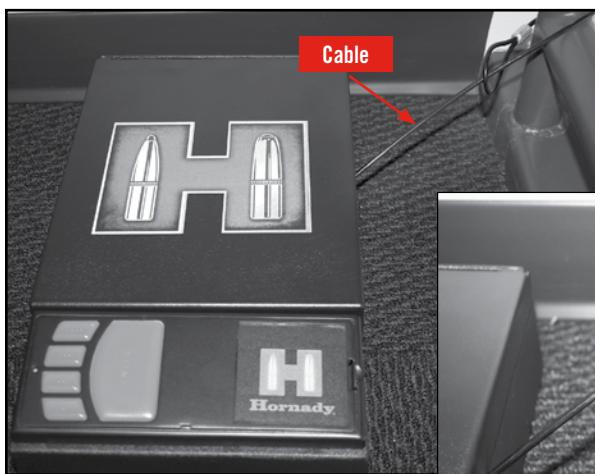

## **RAPiD™ Safe Limited Warranty**

Hornady Security™ warrants the RAPiD™ safe will, in normal use and service, be free from defects in workmanship or materials for one (1) year from date of purchase.

This Limited Warranty does not cover any of the following:

- (a) Damage, deterioration, or malfunction resulting from accident, negligence, misuse, improper installation, or lack of maintenance;
- (b) Any defects not discovered and reported to Hornady Security™ during the one (1) year warranty period;
- (c) Usual and customary deterioration or wear resulting from normal use.

This Limited Warranty is not transferable and is enforceable by the original owner only. In the event that Hornady Security™ receives notice from the original purchase of a warranty claim in conformity herewith, Hornady Security™ will promptly undertake an investigation of such claim. If the warranty claim is covered by the Limited Warranty, Hornady Security™, will, in its sole discretion, repair the defect(s) or replace RAPiD™ safe at the expense of Hornady Security™.

**Disclaimer of Implied Warranties.** EXCEPT AS IS OTHERWISE EXPRESSLY SET FORTH IN THE ABOVE LIMITED WARRANTY, HORNADY SECURITY™ MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE WITH RESPECT TO THE RAPiD™ SAFE OR ANY COMPONENT PART THEREOF, INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

**Limitation on Liability.** THE OBLIGATION OF HORNADY SECURITY™ TO REPAIR OR REPLACE AS PROVIDED ABOVE SHALL BE THE SOLE AND ONLY REMEDY RESPECTING ANY DEFECT IN THE RAPiD™ SAFE, OR ANY COMPONENT PART THEREOF. IN THE EVENT THAT THE FOREGOING REMEDY FAILS OF ITS ESSENTIAL PURPOSE, THE LIABILITY OF HORNADY SECURITY™ TO PURCHASER SHALL NOT, IN ANY EVENT, EXCEED THE ACTUAL PURCHASE PRICE OF THE NON-CONFORMING GOODS; AND

**Limitation on the Nature of Damages.** HORNADY SECURITY™ SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LIQUIDATED OR PUNITIVE DAMAGES OF ANY NAME, NATURE OR DESCRIPTION. HORNADY SECURITY™ IS NOT RESPONSIBLE FOR DAMAGE TO OR THEFT OF THE RAPiD SAFE, OR ITS CONTENTS.

# Product Registration and Service

You must register your RAPiD™ safe in order to obtain Warranty Service. Simply complete and return the enclosed product registration card or submit through our website by going to [hornady.com/warranties](http://hornady.com/warranties)

## To Receive Warranty Service

In order to report a warranty claim, call Hornady Security™ at 800-338-3220 to request a return authorization number. Returns will not be accepted without prior return authorization by Hornady Security™. When a return authorization number has been obtained, be sure all contents have been removed from the RAPiD™ safe before sending it for service. Hornady Security™ is not liable for any loss, theft, or damage to personal property.

## Post-Warranty Service Information

For issues concerning service after the Limited Warranty expires, contact Hornady Security™ at 800-338-3220.

# Frequently Asked Questions

## I've lost my keys. Can I get a replacement?

For security reasons, Hornady **WILL NOT** provide replacement barrel keys for the RAPiD™ safe. Consult a locksmith if needed.

## Where can I find the serial number?

The serial number is located under the keypad panel.

## How long does my access code need to be?

Your code must be 4-to-6 digits long.

## How long should the batteries last?

Quality batteries should last approximately 12 months, depending on use.

## What size handgun will the RAPiD™ safe accommodate?

The RAPiD™ sleeve accommodates most 5-inch pistols, and 4-inch barreled revolvers. Removing the RAPiD™ sleeve allows more space for larger handguns.


## How do I return my RAPiD™ safe for warranty work?

Call Hornady® at 800-338-3220 and one of our technicians will assist you.

## Why isn't my RFID tag (bracelet, key fob, card) opening the safe?

- Be sure the RFID tag is programmed to your safe. The RAPiD™ safe allows two (2) RFID tags to be programmed for use.
- Check the power source. If the unit is plugged into an electrical outlet, the red LED light should be on. If the unit is on battery power, press any keypad button (to bring the system to ready) before placing the RFID tag on the reader.

## Mounting Template

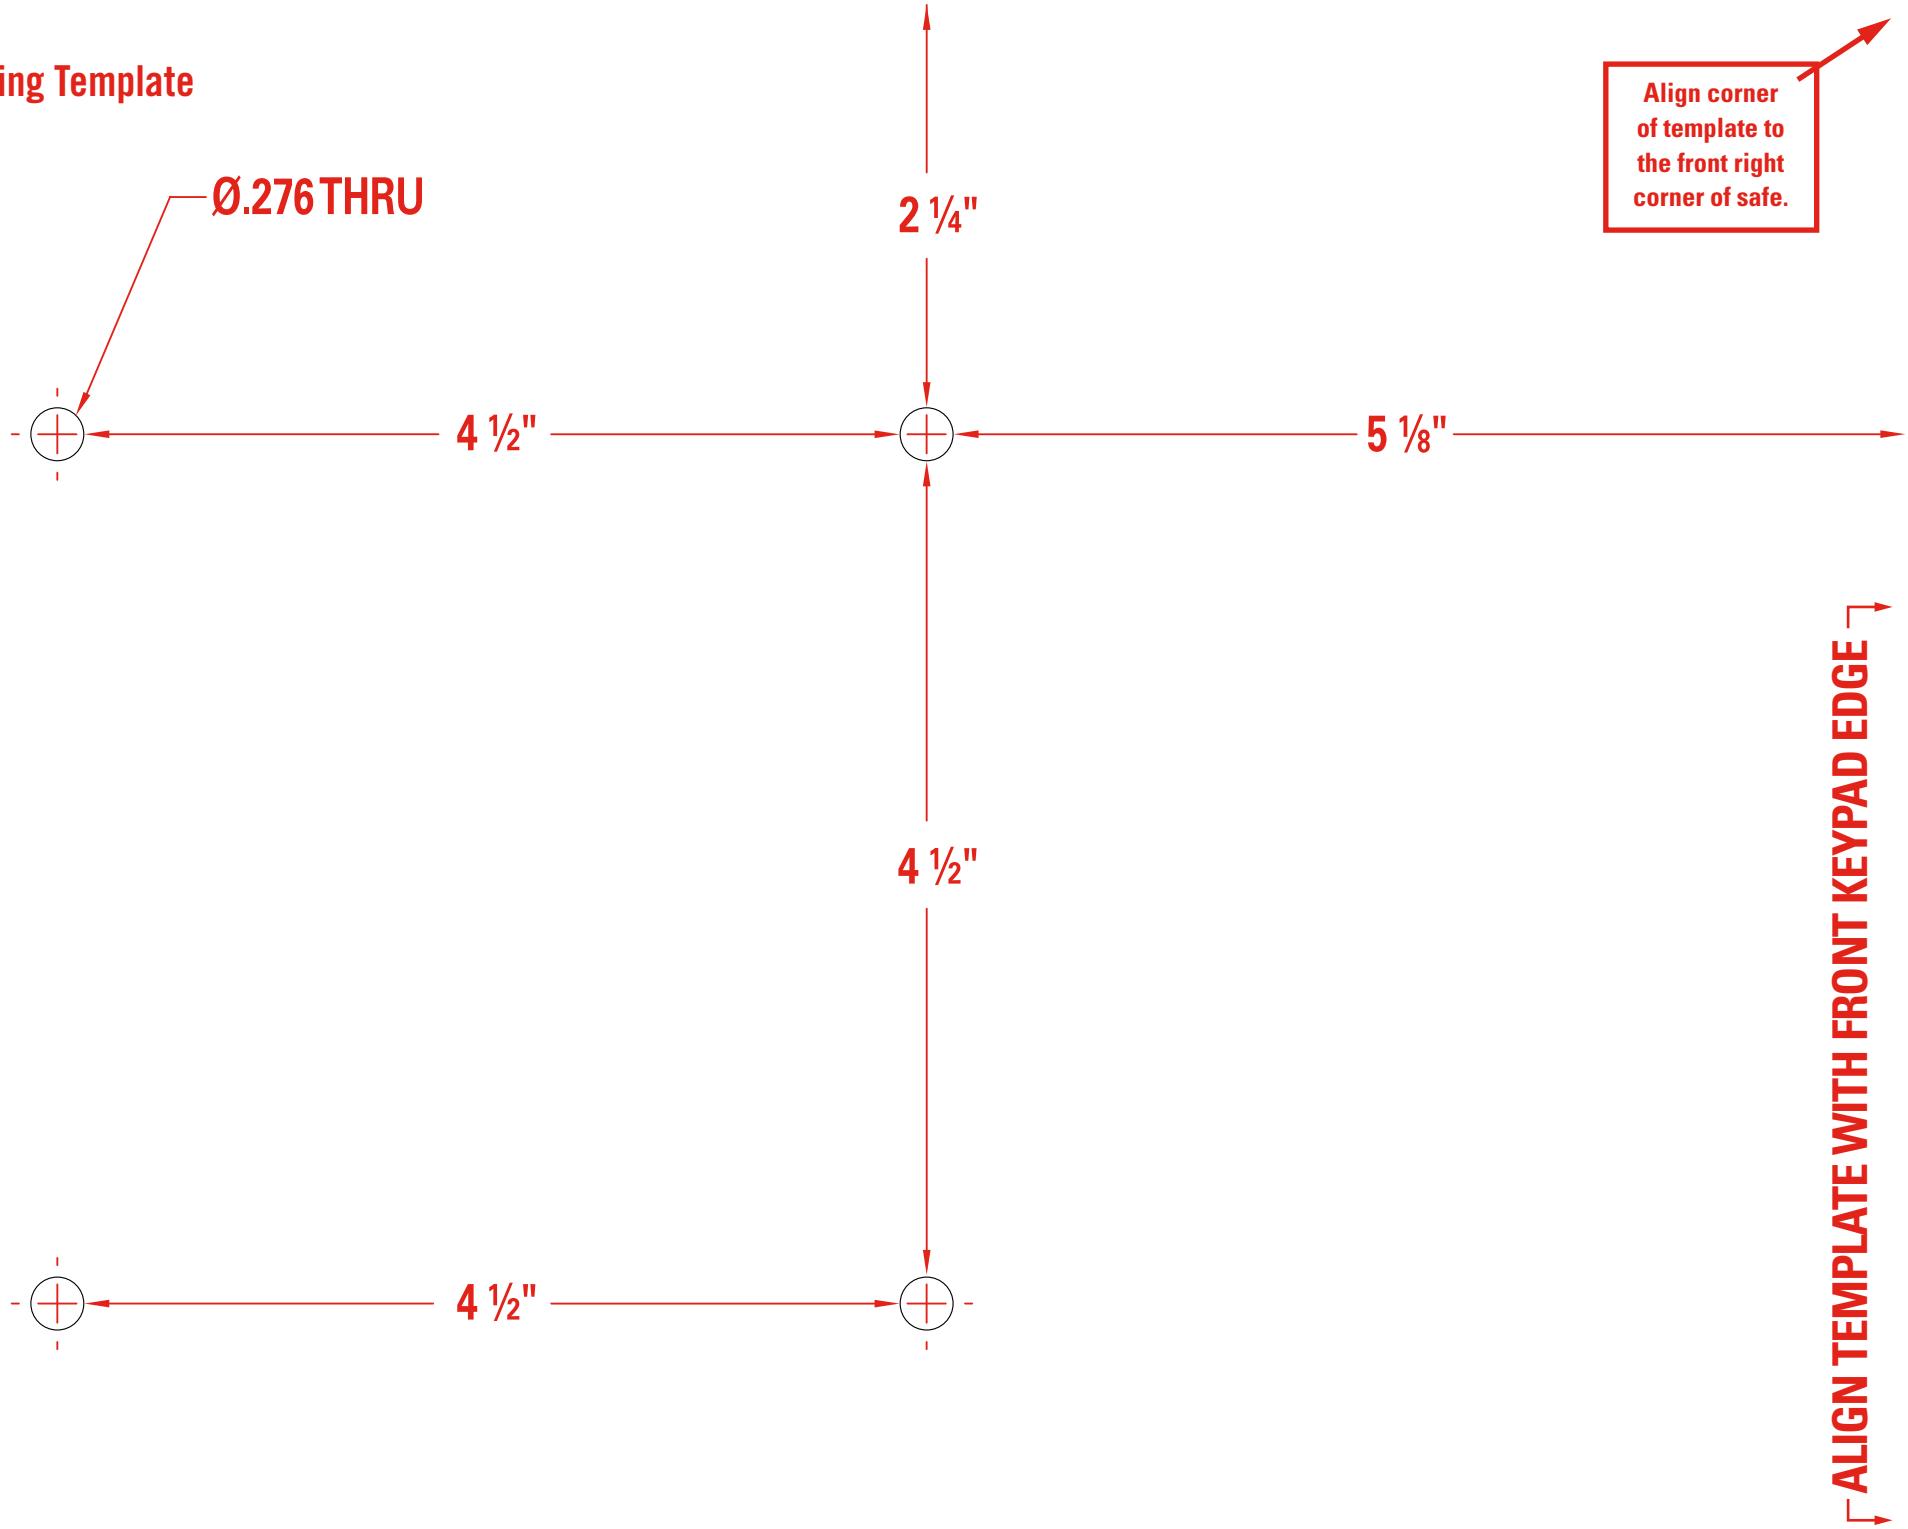



P.O. Box 1848, Grand Island, Nebraska 68802-1848  
308-382-1390 • 800-338-3220 • Fax: 308-382-5761  
[www.hornady.com](http://www.hornady.com) • [webmaster@hornady.com](mailto:webmaster@hornady.com)